

A WARNING: To prevent damage to your boat and/or cover please read and understand instructions before attempting to use cover.

It features:

A special anti-pooling system is included to prevent large puddles from ruining your cover.

2. The SurLast3 all-weather fabric was chosen to allow stability, water repellency and breathe-ability.

3. The Vacu-Hold™ system allows trailering at highway speeds (65 mph) without billowing or buffeting.

4. The new ratchet and drawstrap type attachment will allow easy, tight and secure installation. CARE, WARRANTY AND INSTALLATION INSTRUCTIONS-

Refer to http://commercialsewing.com/careanduse.html

CARE INSTRUCTIONS- Wash with warm soapy water (while installed if possible) and allow to air dry. For stubborn stains, mild detergent is recommended.

Over time dirt and grime can build up on the cover and may dirty your vinyl. We suggest using a product such as Mr. Clean

Magic Eraser to aid in removing this type of staining.

Storing the boat in constant direct sunlight will shorten the life of the cover and the components used to construct it. We recommend storing the boat in a location that exposes it to some sun and also shades it throughout the day. Preferably morning sun and afternoon shade.

WARRANTY- This cover includes a two-year warranty from date of purchase against any defects in material or workmanship. If you incur any problems or have any comments please contact your dealer or call Commercial Sewing Customer Service directly at (860) 482-5509.

PROPER INSTALLATION-

A. Anti-Pooling System Installation:

Note: Install anti-pooling system as per illustration connecting the side release buckles around the rear boarding handles and. stand the rear pole upright. Work your way to the front of the boat: For an open bow extend the front pole completely. For the closed bow remove and discard the 7/8 pole and use only the 3/4" pole attach the pole end onto the 3/4" pole. Pull the other two webbing straps to the two front hand es and connect the side release buckles around the handle. For the 200 feed the strap around the BOW eye (underneath the gunwale) and connect to the opposite side. Tighten adjustable buckle strap, until the pole stands upright.

B. Proper Cover Installation:

- Place cover on boat starting at front, use front cleats or front lift eye openings as buttons to keep cover in place, work toward back over anti-pooling system until cleats are "buttoned" in place. Connect the side release buckles and the velcro around the base of the tower. Refer to the drawings on page 2 for connecting the zipper around the tower.
- · Maneuver in place until cover fits over gunwale. Check the symmetry. Disconnect velcro wrap around ratchet.

Hint-To properly install ratchet strap system.

- 1. Pull the webbing through the channeled ratchet cylinder and tension completing almost one full cycle to "start" the webbing. You should see the edge of the rear channel cylinder and the front cylinder is wrapped with webbing. You now have a one-way strap. Pull the end of the webbing tight.
 - 2. Pull the sides of the cover to even the webbing throughout. Pull the end of the webbing tight again.
 - Crank the ratchet until taught. Zipper pocket closed and wrap Velcro around pocket.

4. Check boat webbing for tension during stops while trailering

NOTE: Webbing may stretch during first installation and use (CHECK OFTEN)
WARNING: Readjust and retighten the cover after trailering and before storage. To prevent pooling do not allow snow and ice to accumulate on the cover. Never trailer at speeds above the speed limit.

Note: Proper installation and operation of this cover requires that it be very tight at the gunwale. Retighten as necessary before. after and during stops while trailering. BE SURE cover is installed below gunwale before final ratchet adjustment. ZIP ratchet pocket closed for final installation.


Warning:Zippered ratchet mechanism should be hand tightened only. Do not pry or attempt to operate ratchet mechanism with any type of tool

REMOVAL-

Disconnect velcro wrap & zip open ratchet pocket.
Follow instructions on ratchet label to release pressure.
Once pressure is released pull out webbing to allow simple future installation, then close handle and ZIP POCKET closed (this is important to prevent damage in future installation). Remove cover from cleat reinforcements and fold cover working from rear to front.

Disconnect anti-pooling pole from either the front (colored webbing) or back. After disconnecting collapse poles by pushing buttons and telescoping them down.

Wrap webbing around poles.

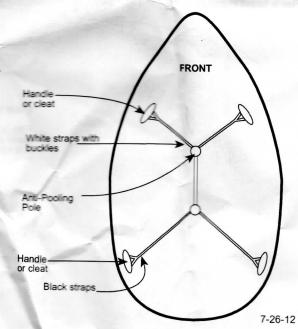


ISNAUTIQUEM/R5



CLEAT REINFORCEMENT OPTION INSTALLATION INSTRUCTIONS

We suggest to have these cleats installed by a professional sewing shop.

- 1) With cover completely installed note and mark where the cleats fall on the cover.
- 2) Mark the end of the cleat base
- 3) Cut 1" x 6" hole in the cover
- 4) Button reinforcement onto the cut-out
- 5) Sew the outside edge 5-7 stitches per inch
- Flexible sew through plastic
- Universal black

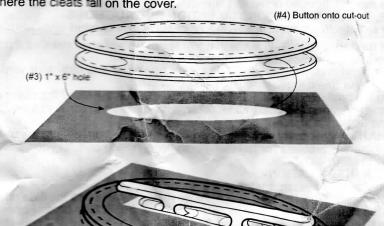



Note: If you require additional cleat reinforcements, call (860)482-5509.

FOLD DOWN TOWER ZIPPERED TOWER FLAP INSTALLATION INSTRUCTIONS FOR FCT5 TOWER COVER NOT TO BE USED WITH TOWER IN 1/2 POSITION

Cover with tower down-Wakeboard racks must be removed and stoked

Flap is folded in and zipper it closed with second exterior attachment

Cover with tower up
Flap is folded impugh
tower and ziccer is closed with
first exterior attachment