



Ahead of the Curve®

JL AUDIO®

M A R I N E



Ahead of the Curve®

NAUTIQUE®

JL AUDIO®

M A R I N E

 


COMMITMENT TO THE MARINE INDUSTRY





M600/6 Control Panel

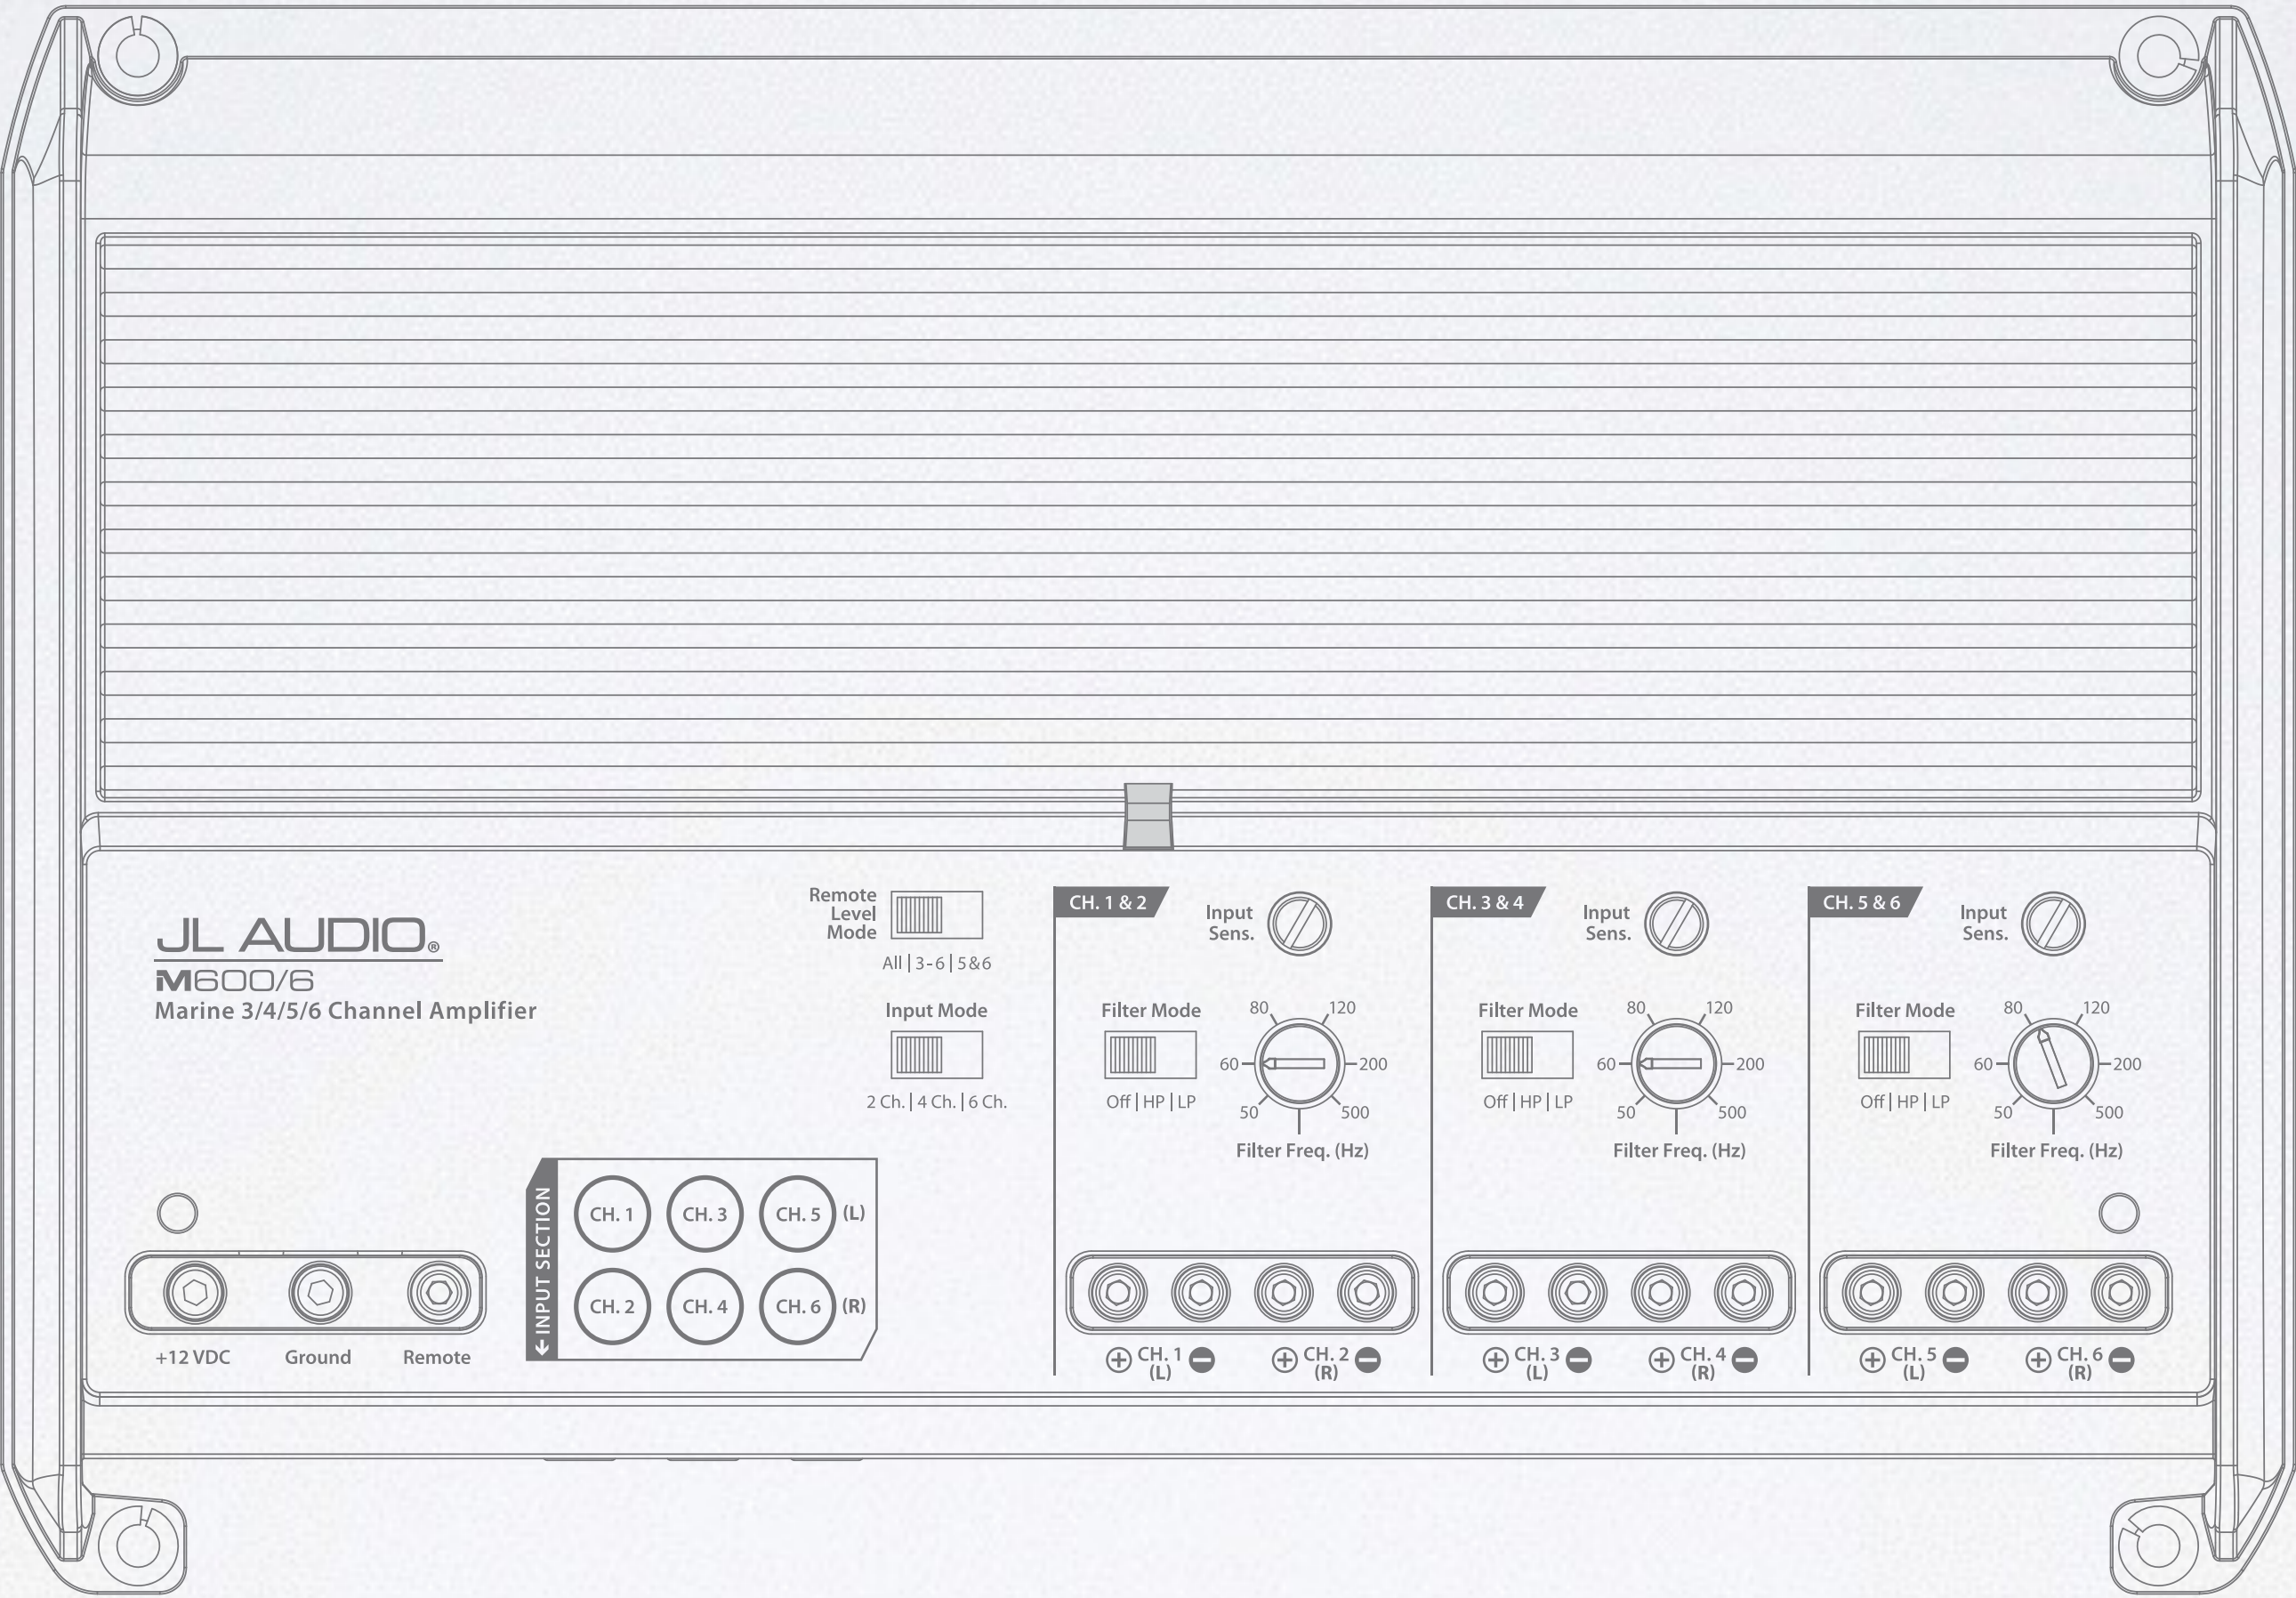



Area of the Curve®

M600/6 Control Panel

JL AUDIO®

M600/6

Marine 3/4/5/6 Channel Amplifier

Remote
Level
Mode



All | 3-6 | 5&6

Input Mode



2 Ch. | 4 Ch. | 6 Ch.

← INPUT SECTION



+12 VDC

Ground

Remote

CH. 1 & 2


Input
Sens.




Filter Mode



Off | HP | LP

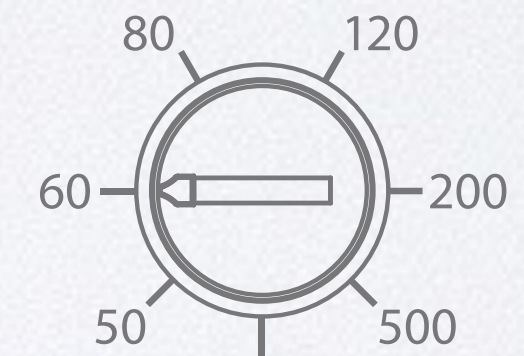

Filter Freq. (Hz)

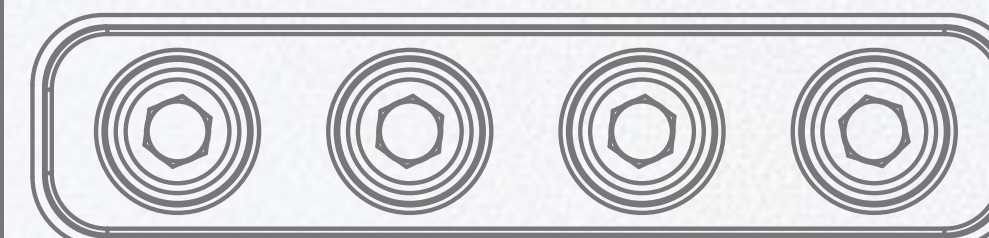

⊕ CH. 1 (L) ⊖

⊕ CH. 2 (R) ⊖

CH. 3 & 4


Input
Sens.




Filter Mode



Off | HP | LP

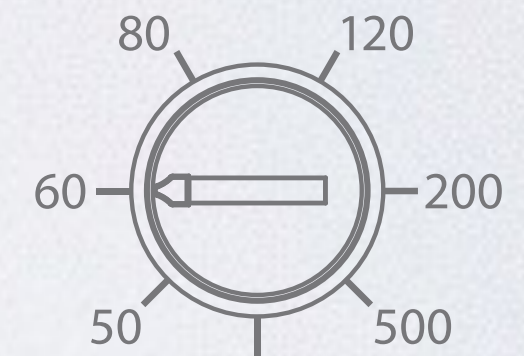 

Filter Freq. (Hz)

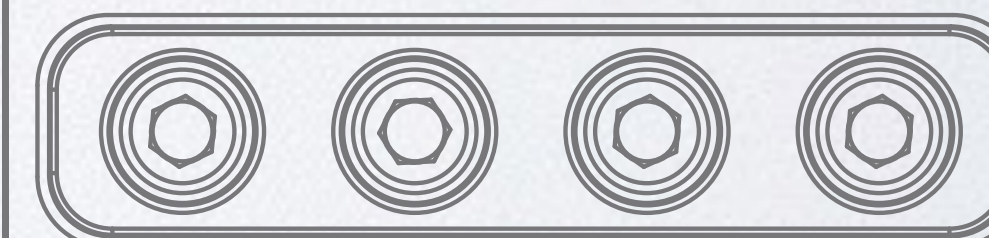


⊕ CH. 3 (L) ⊖

⊕ CH. 4 (R) ⊖




M600/6 Control Detail

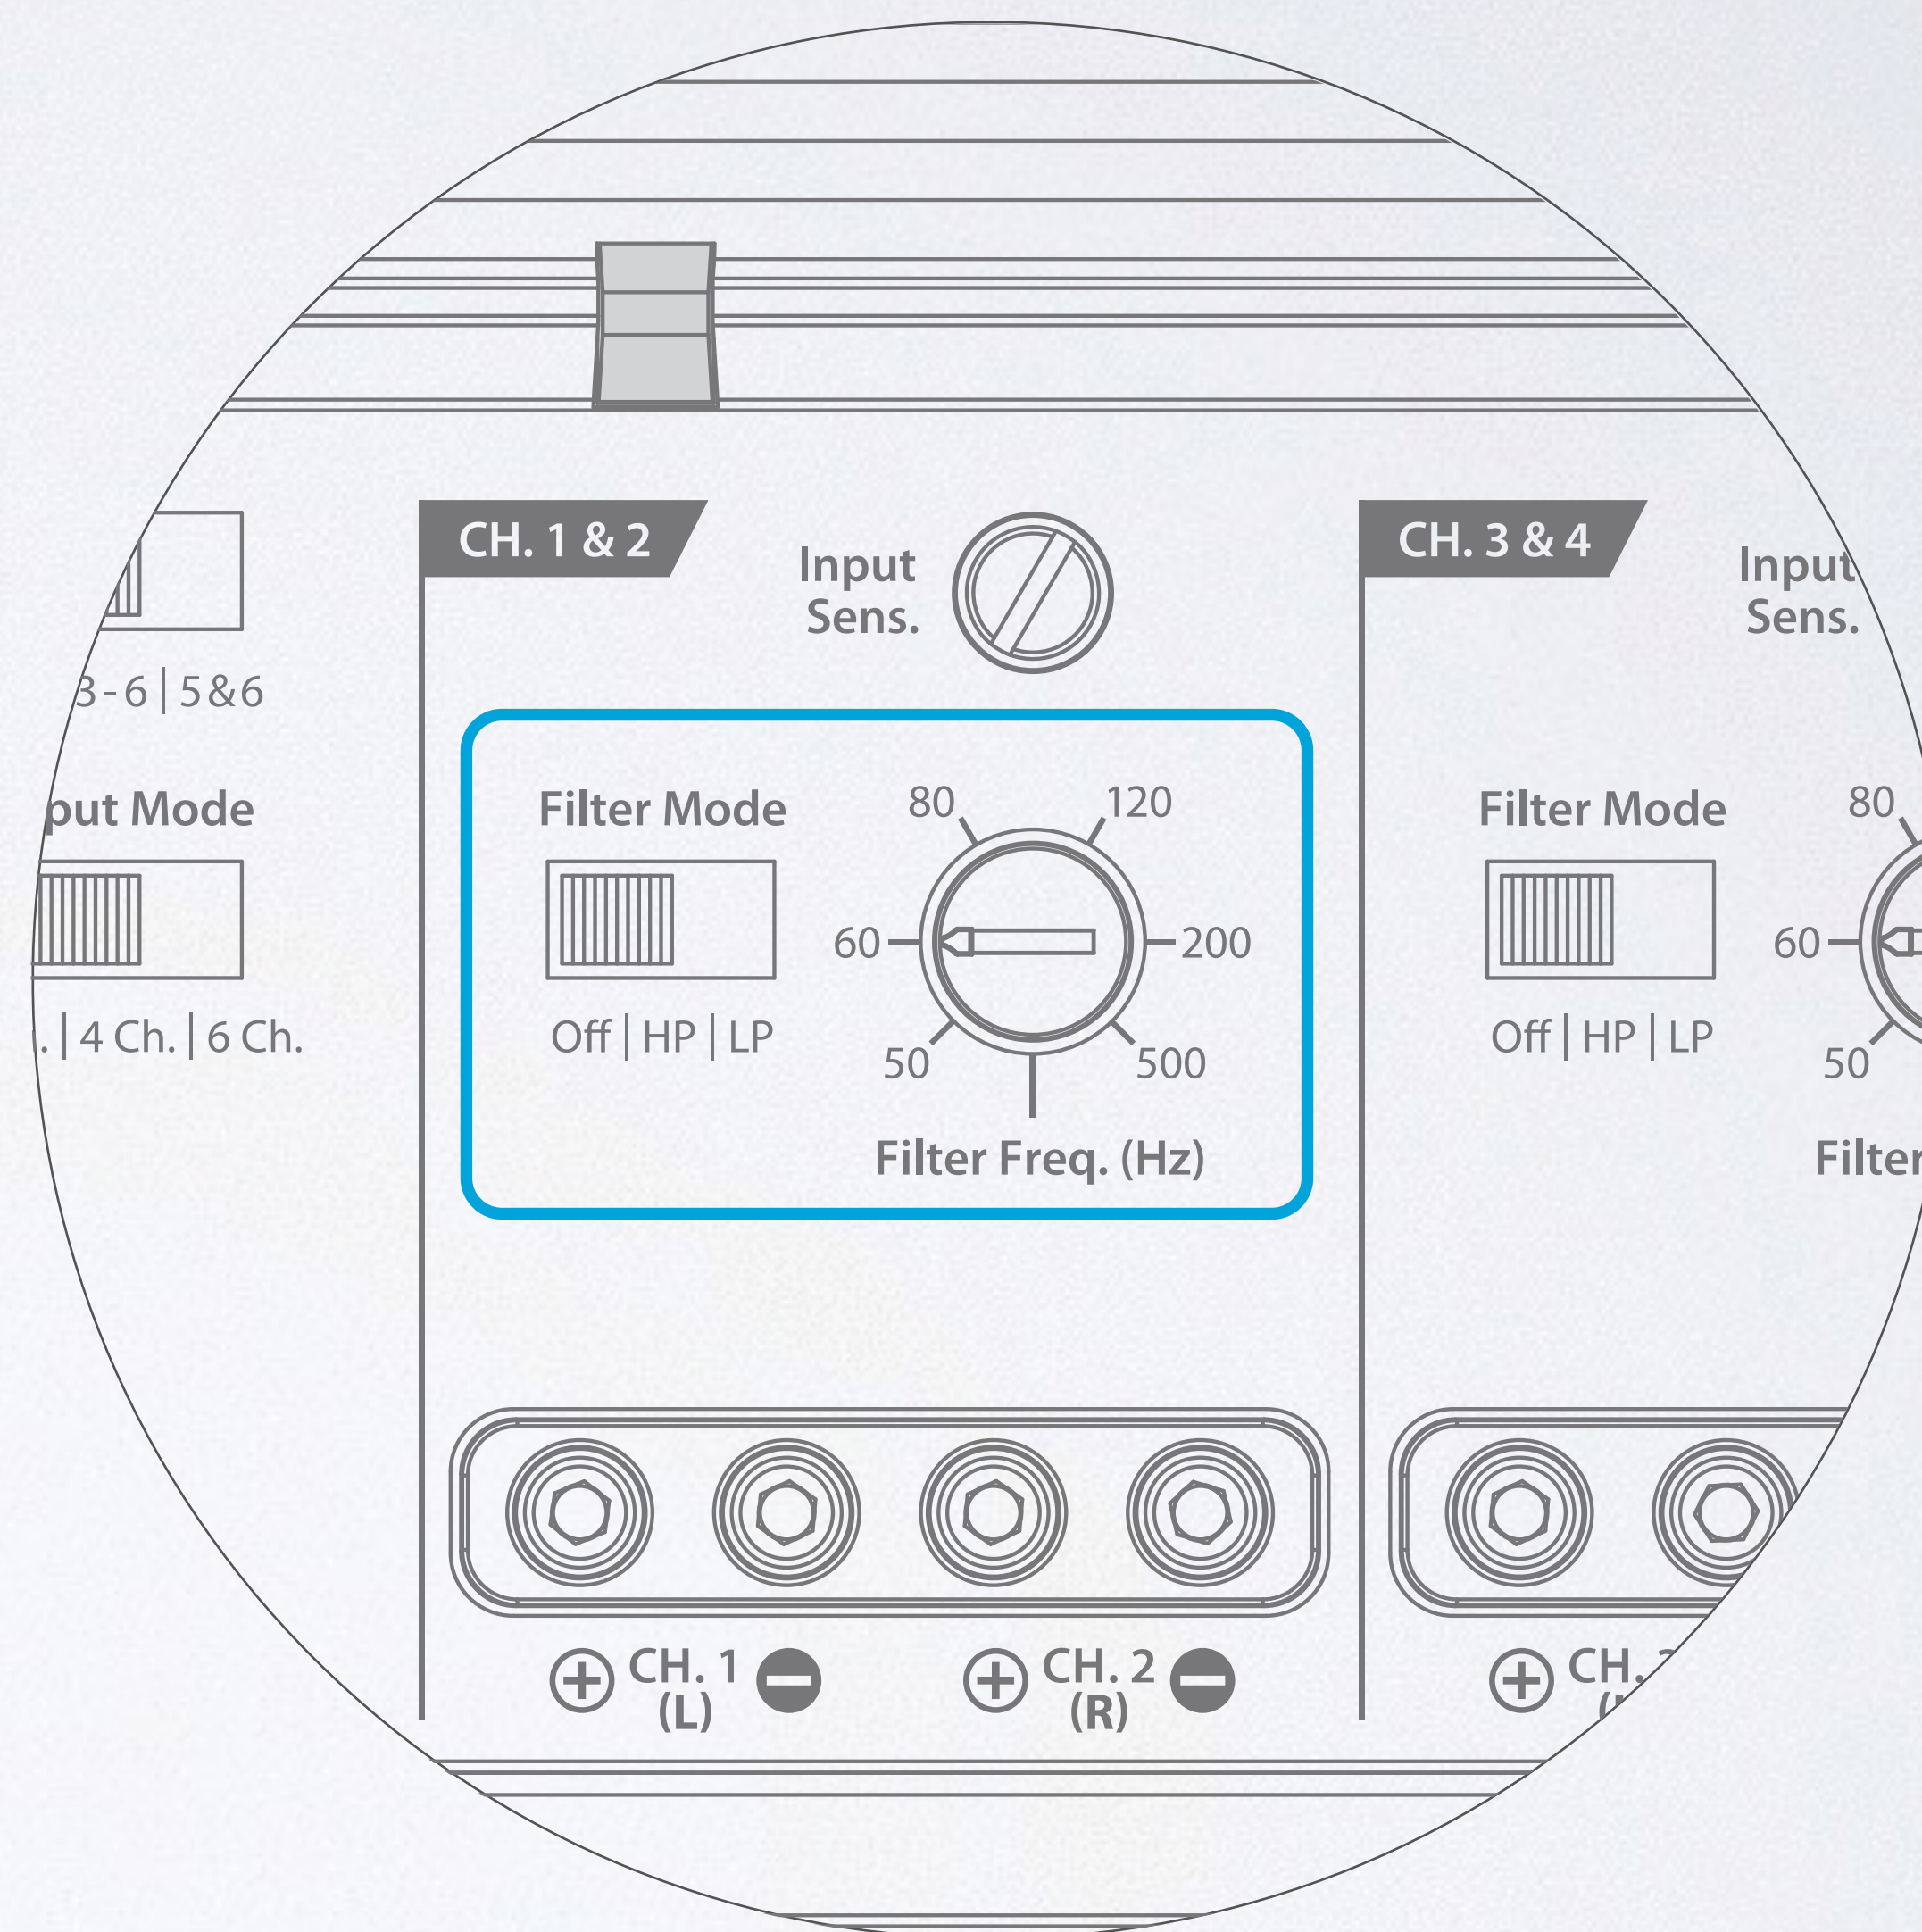



M600/6 Control Detail

- Crossover (Filter) Controls

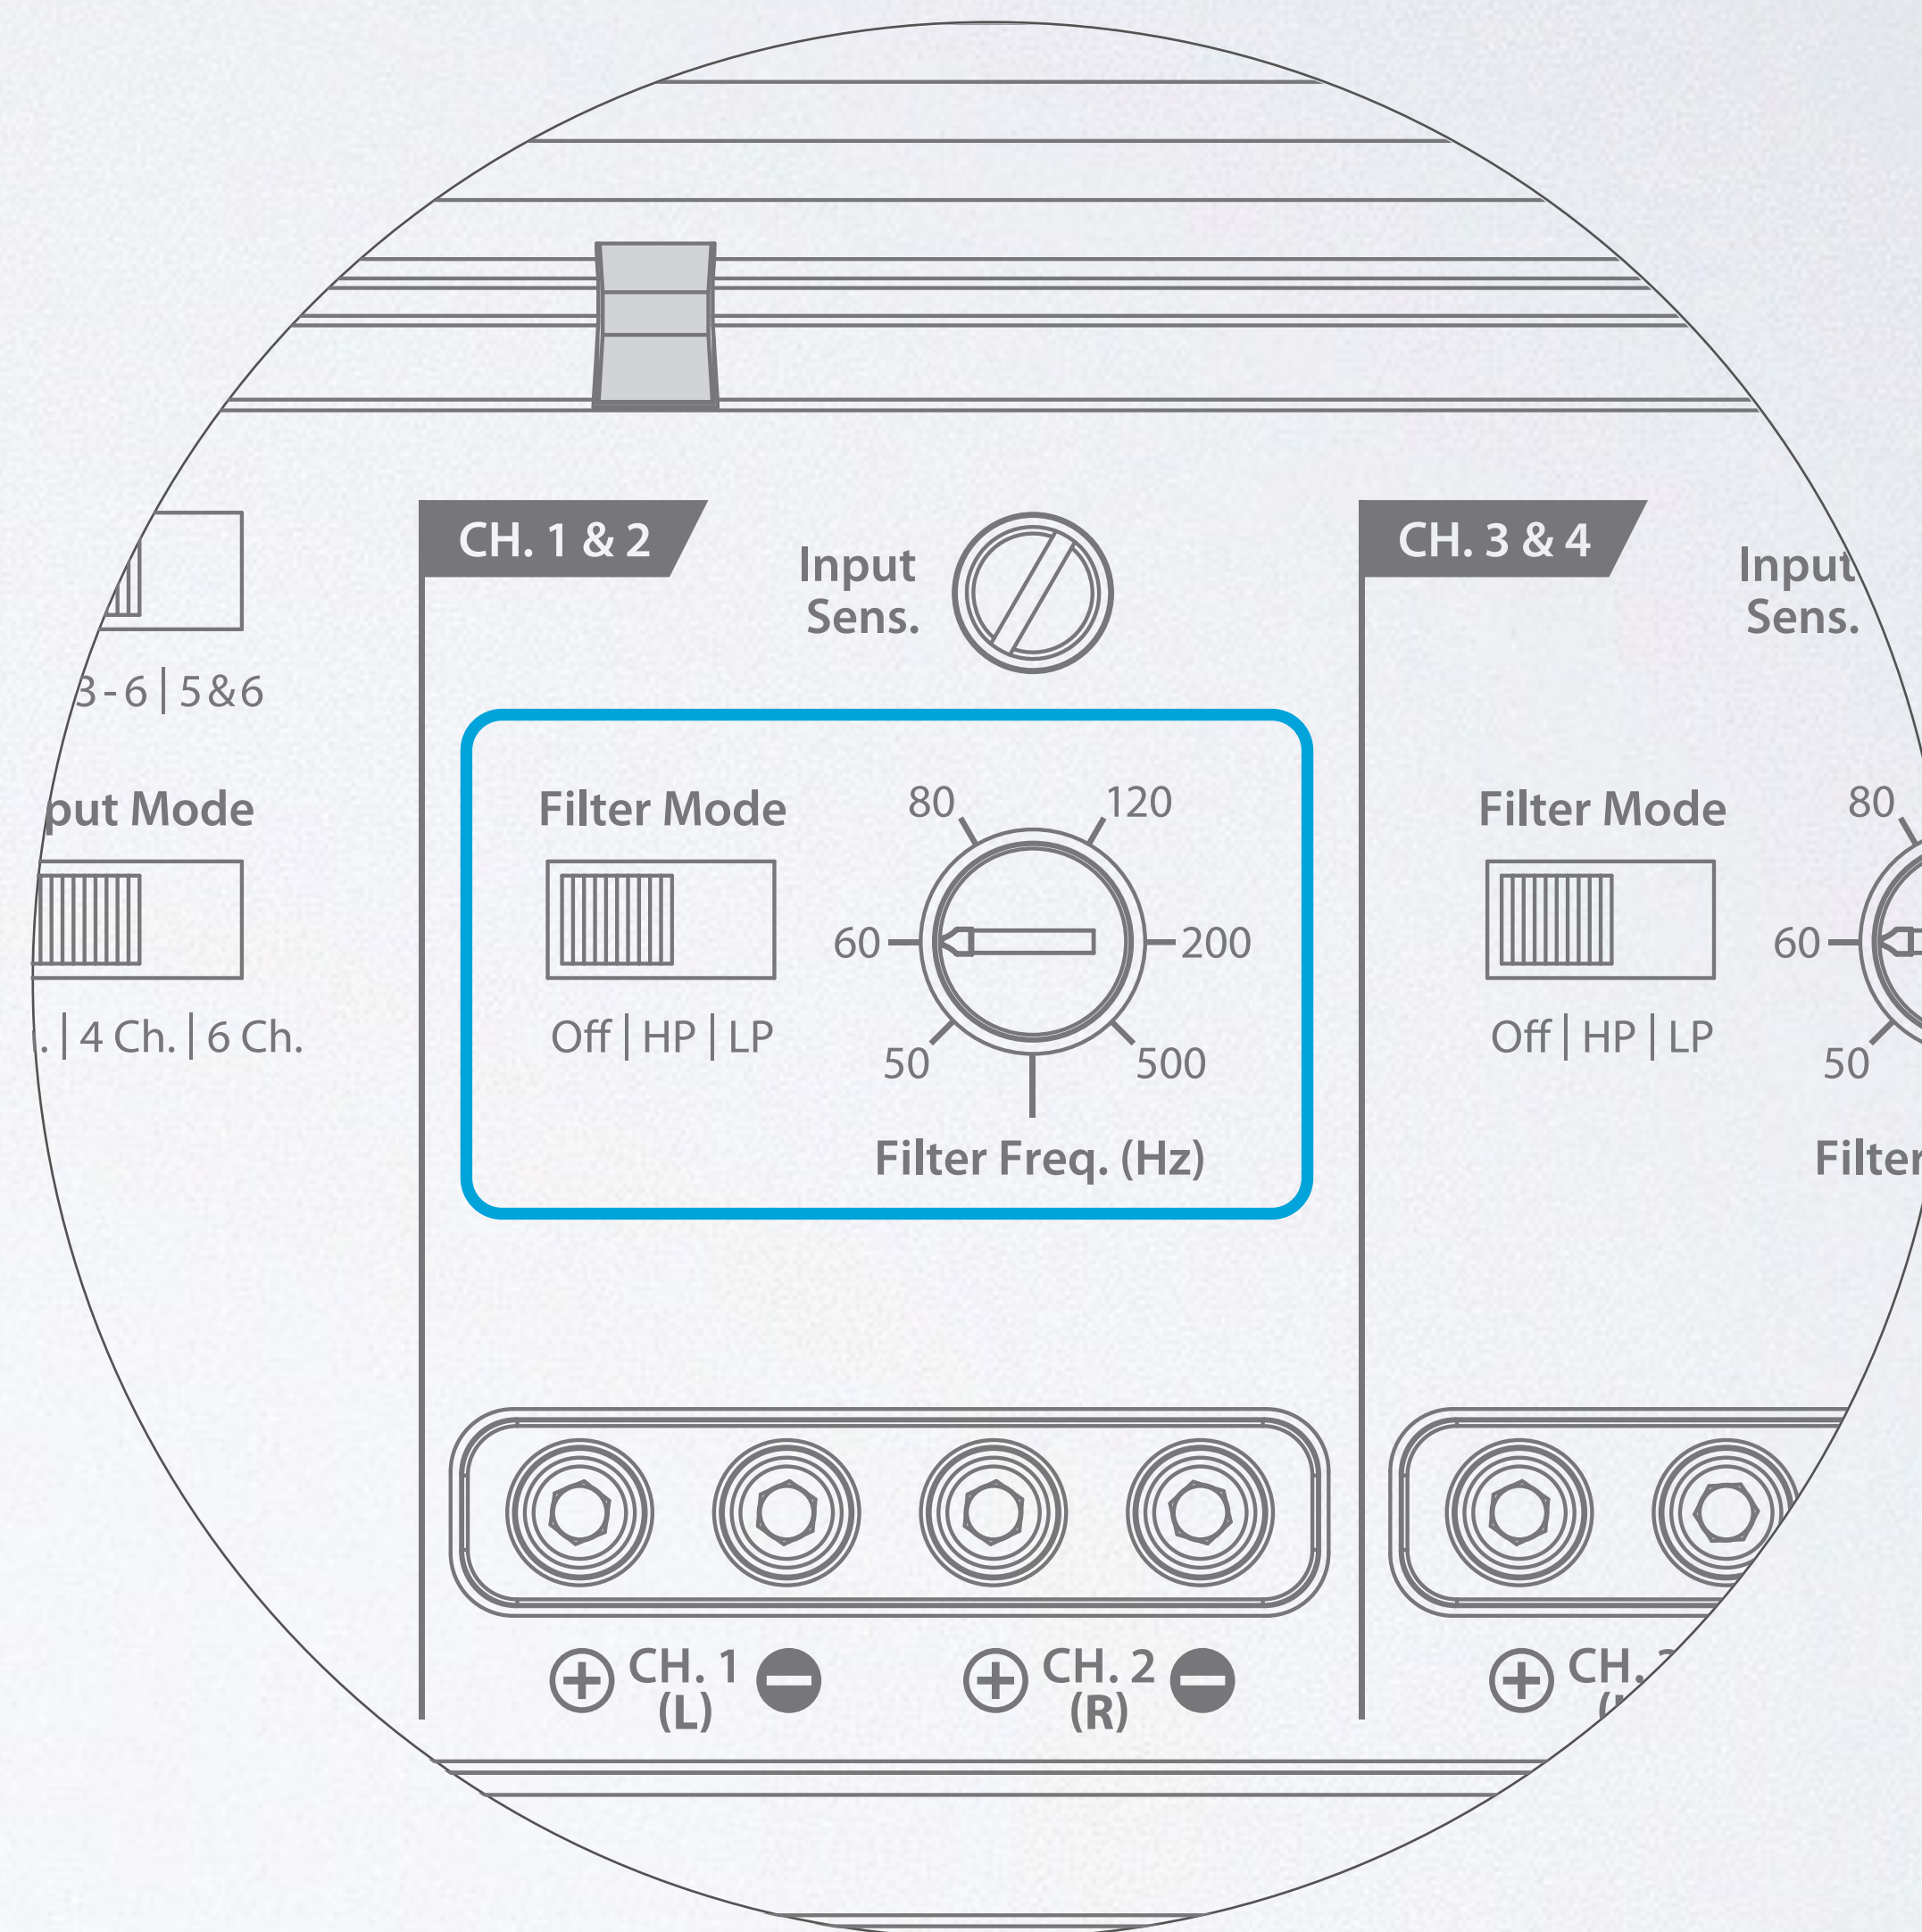




What is an Active Crossover?




 M600/6 Control Detail

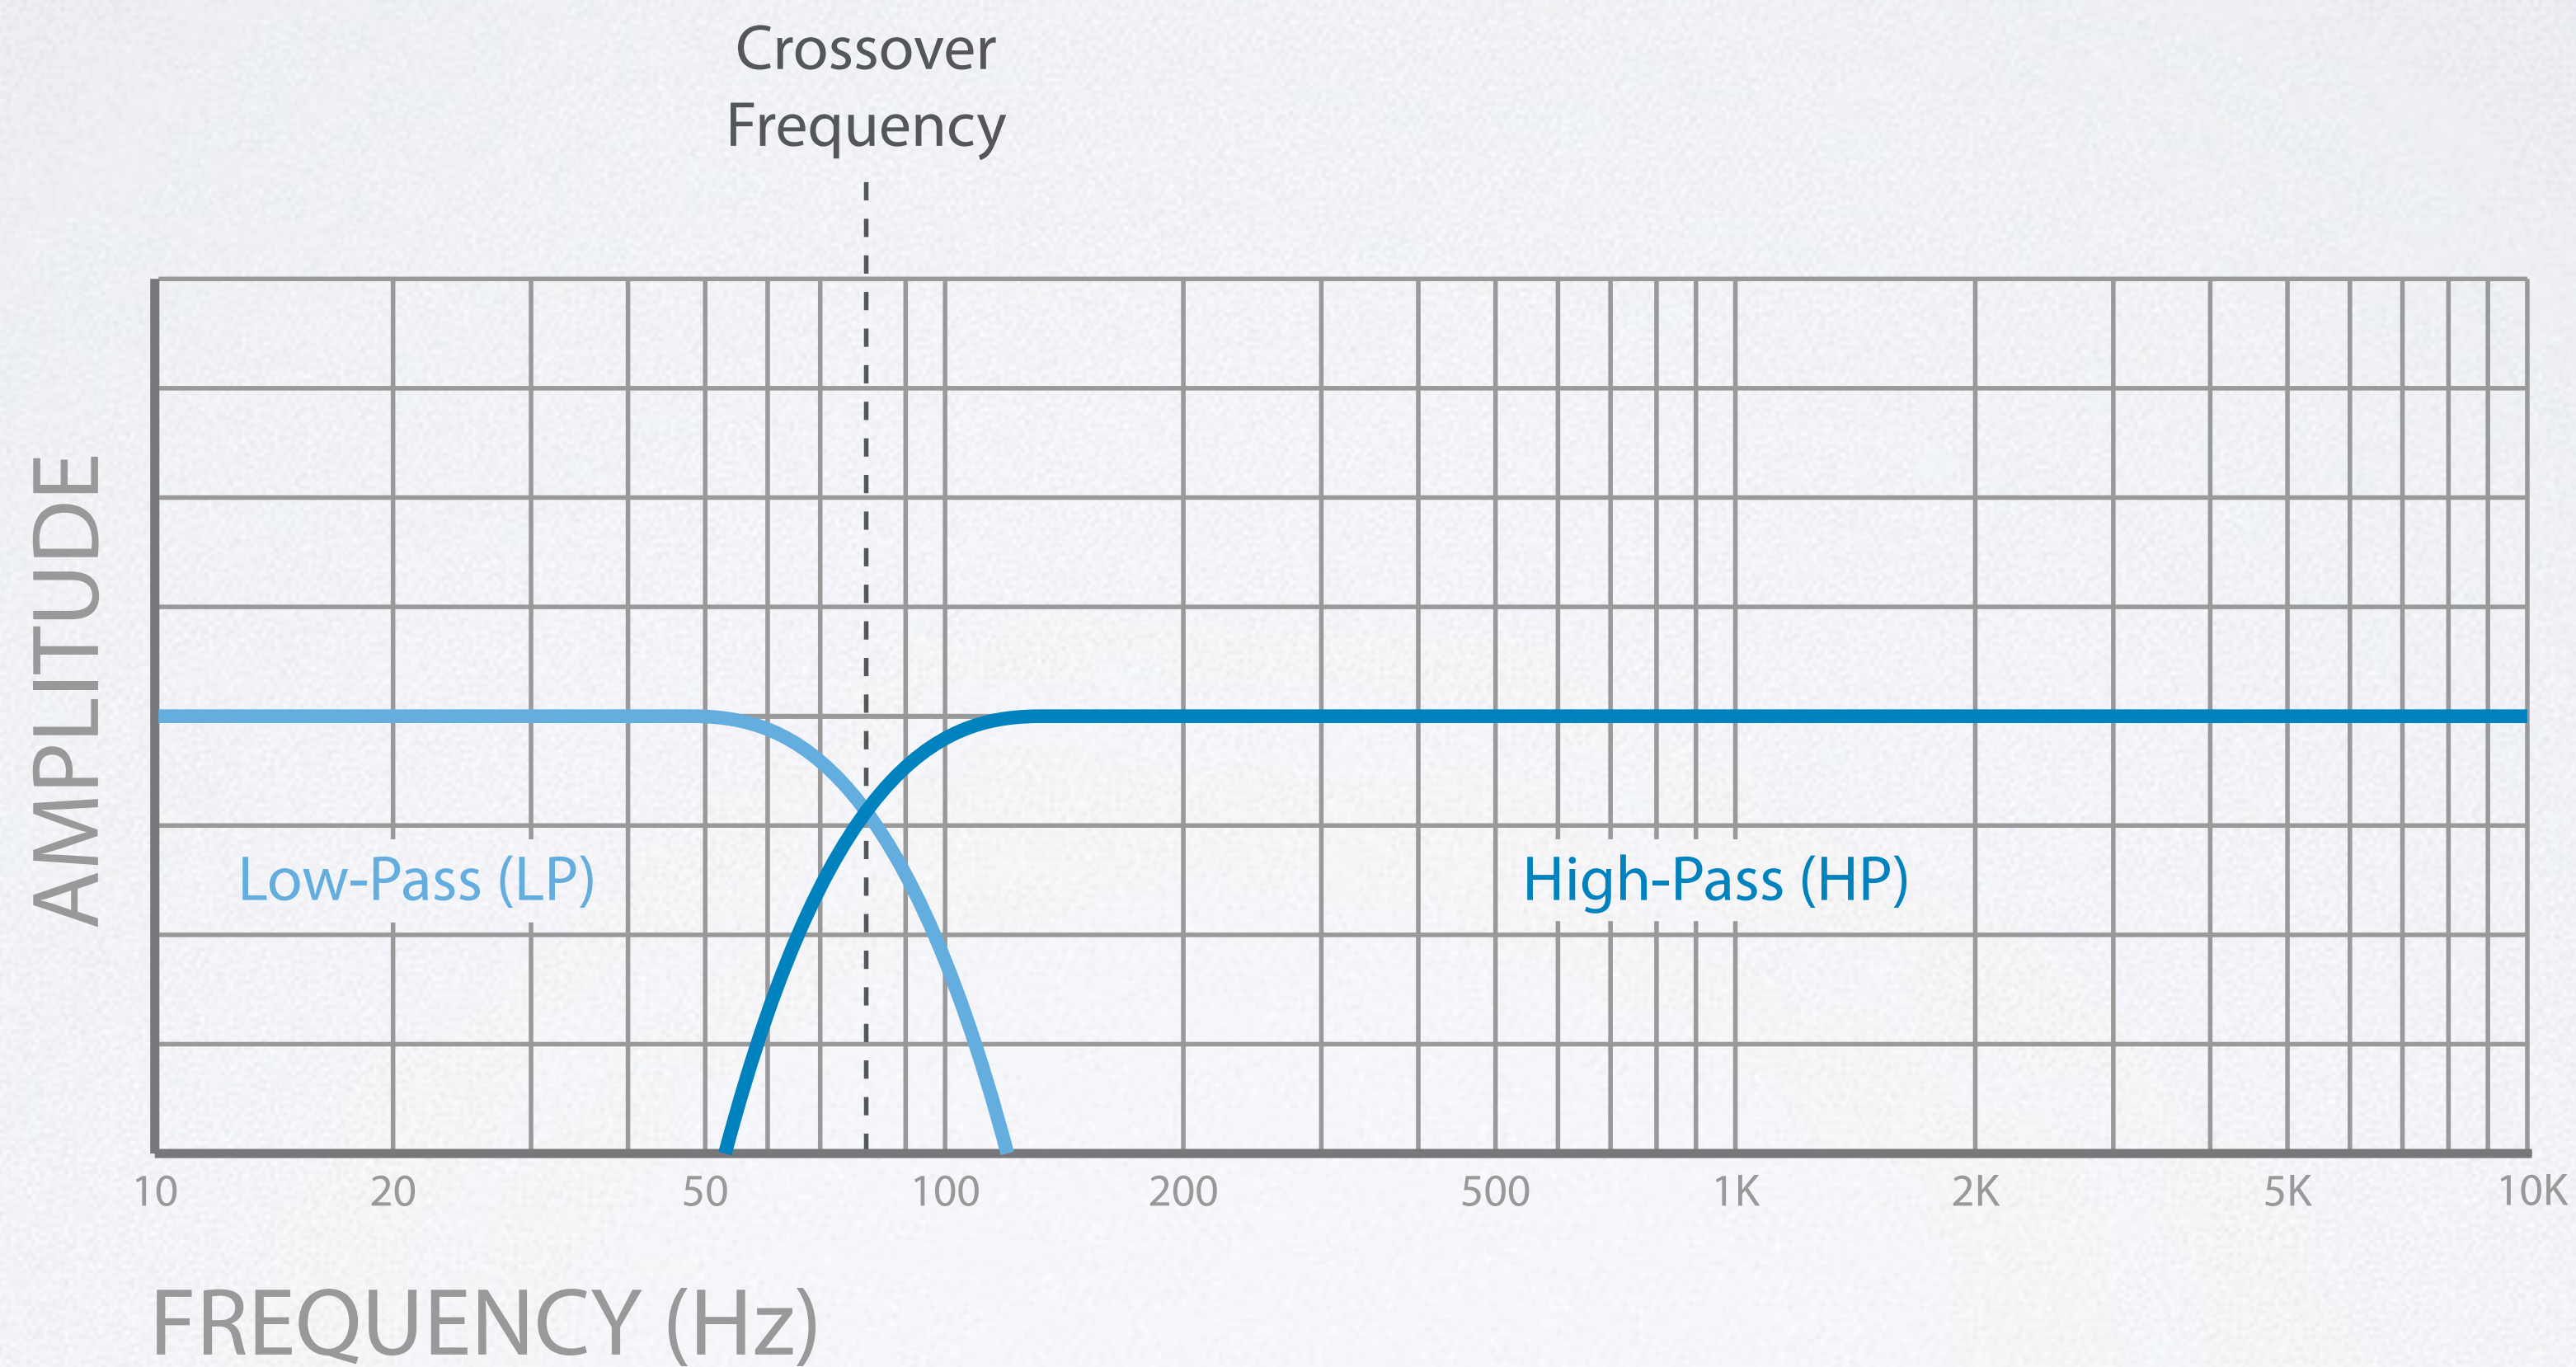




M600/6 Control Detail

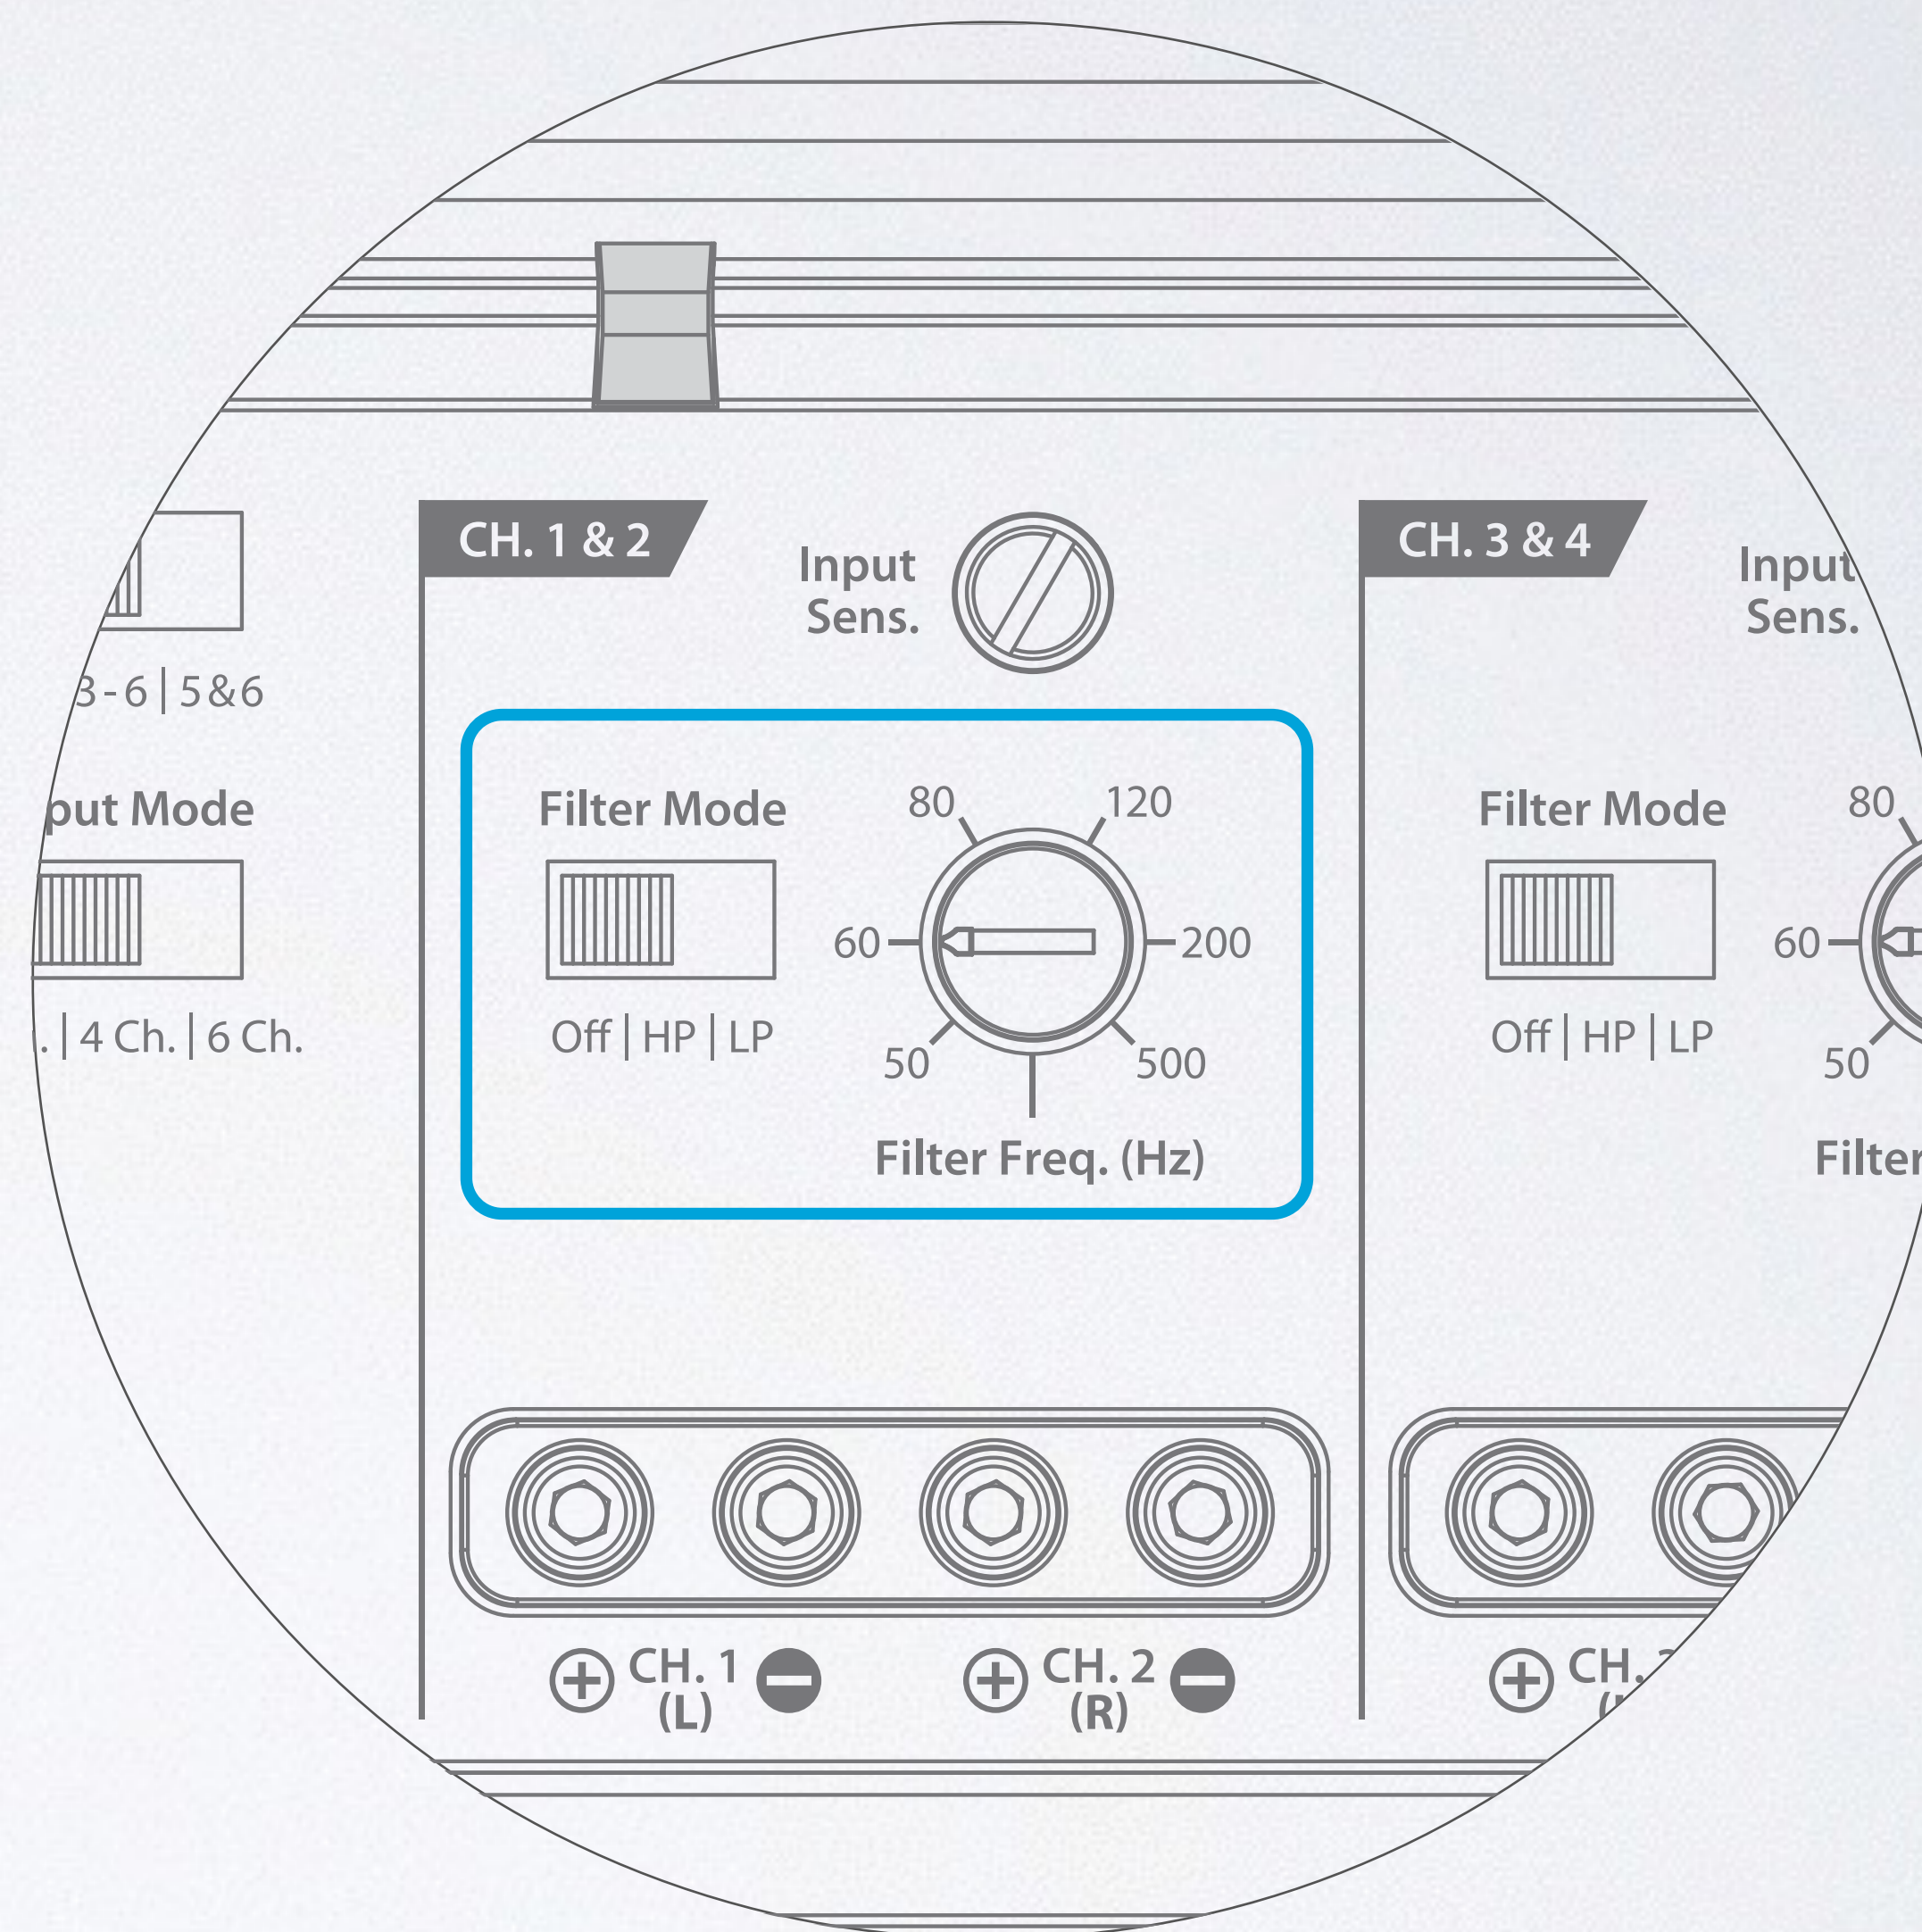



M600/6 Control Detail

- Crossover (Filter) Controls

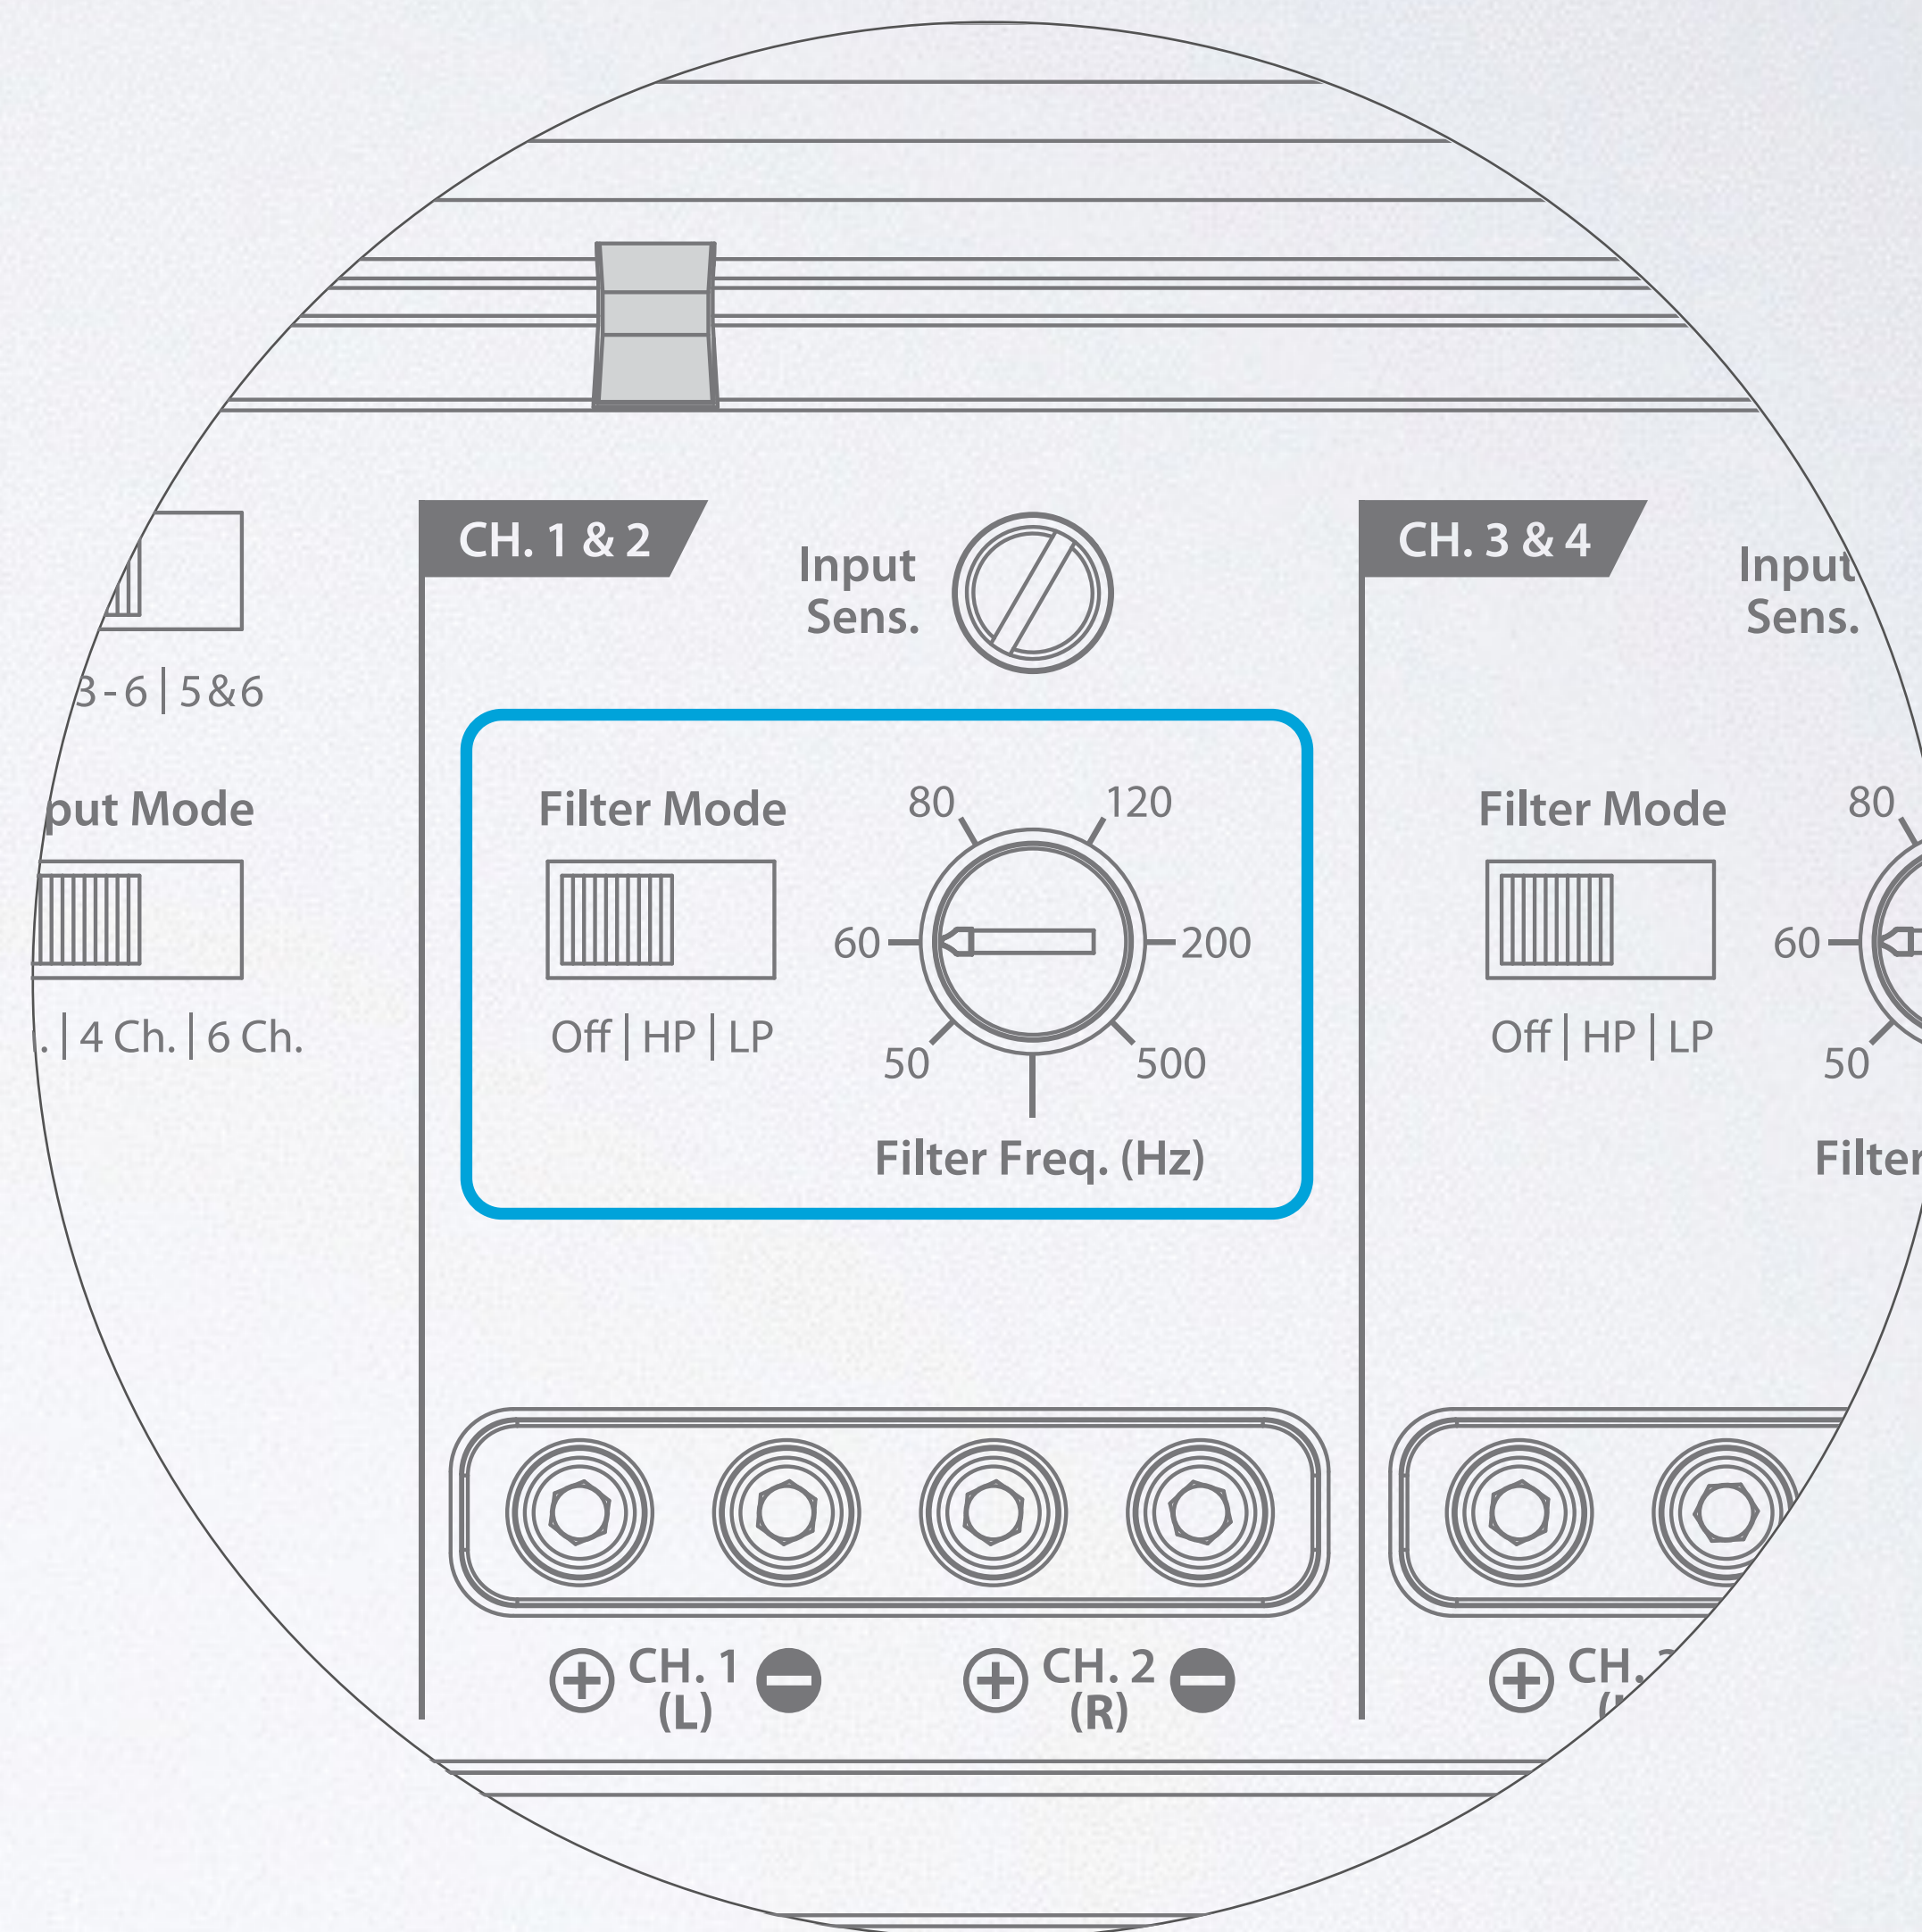




Ahead of the Curve®

Demo



M600/6 Control Panel

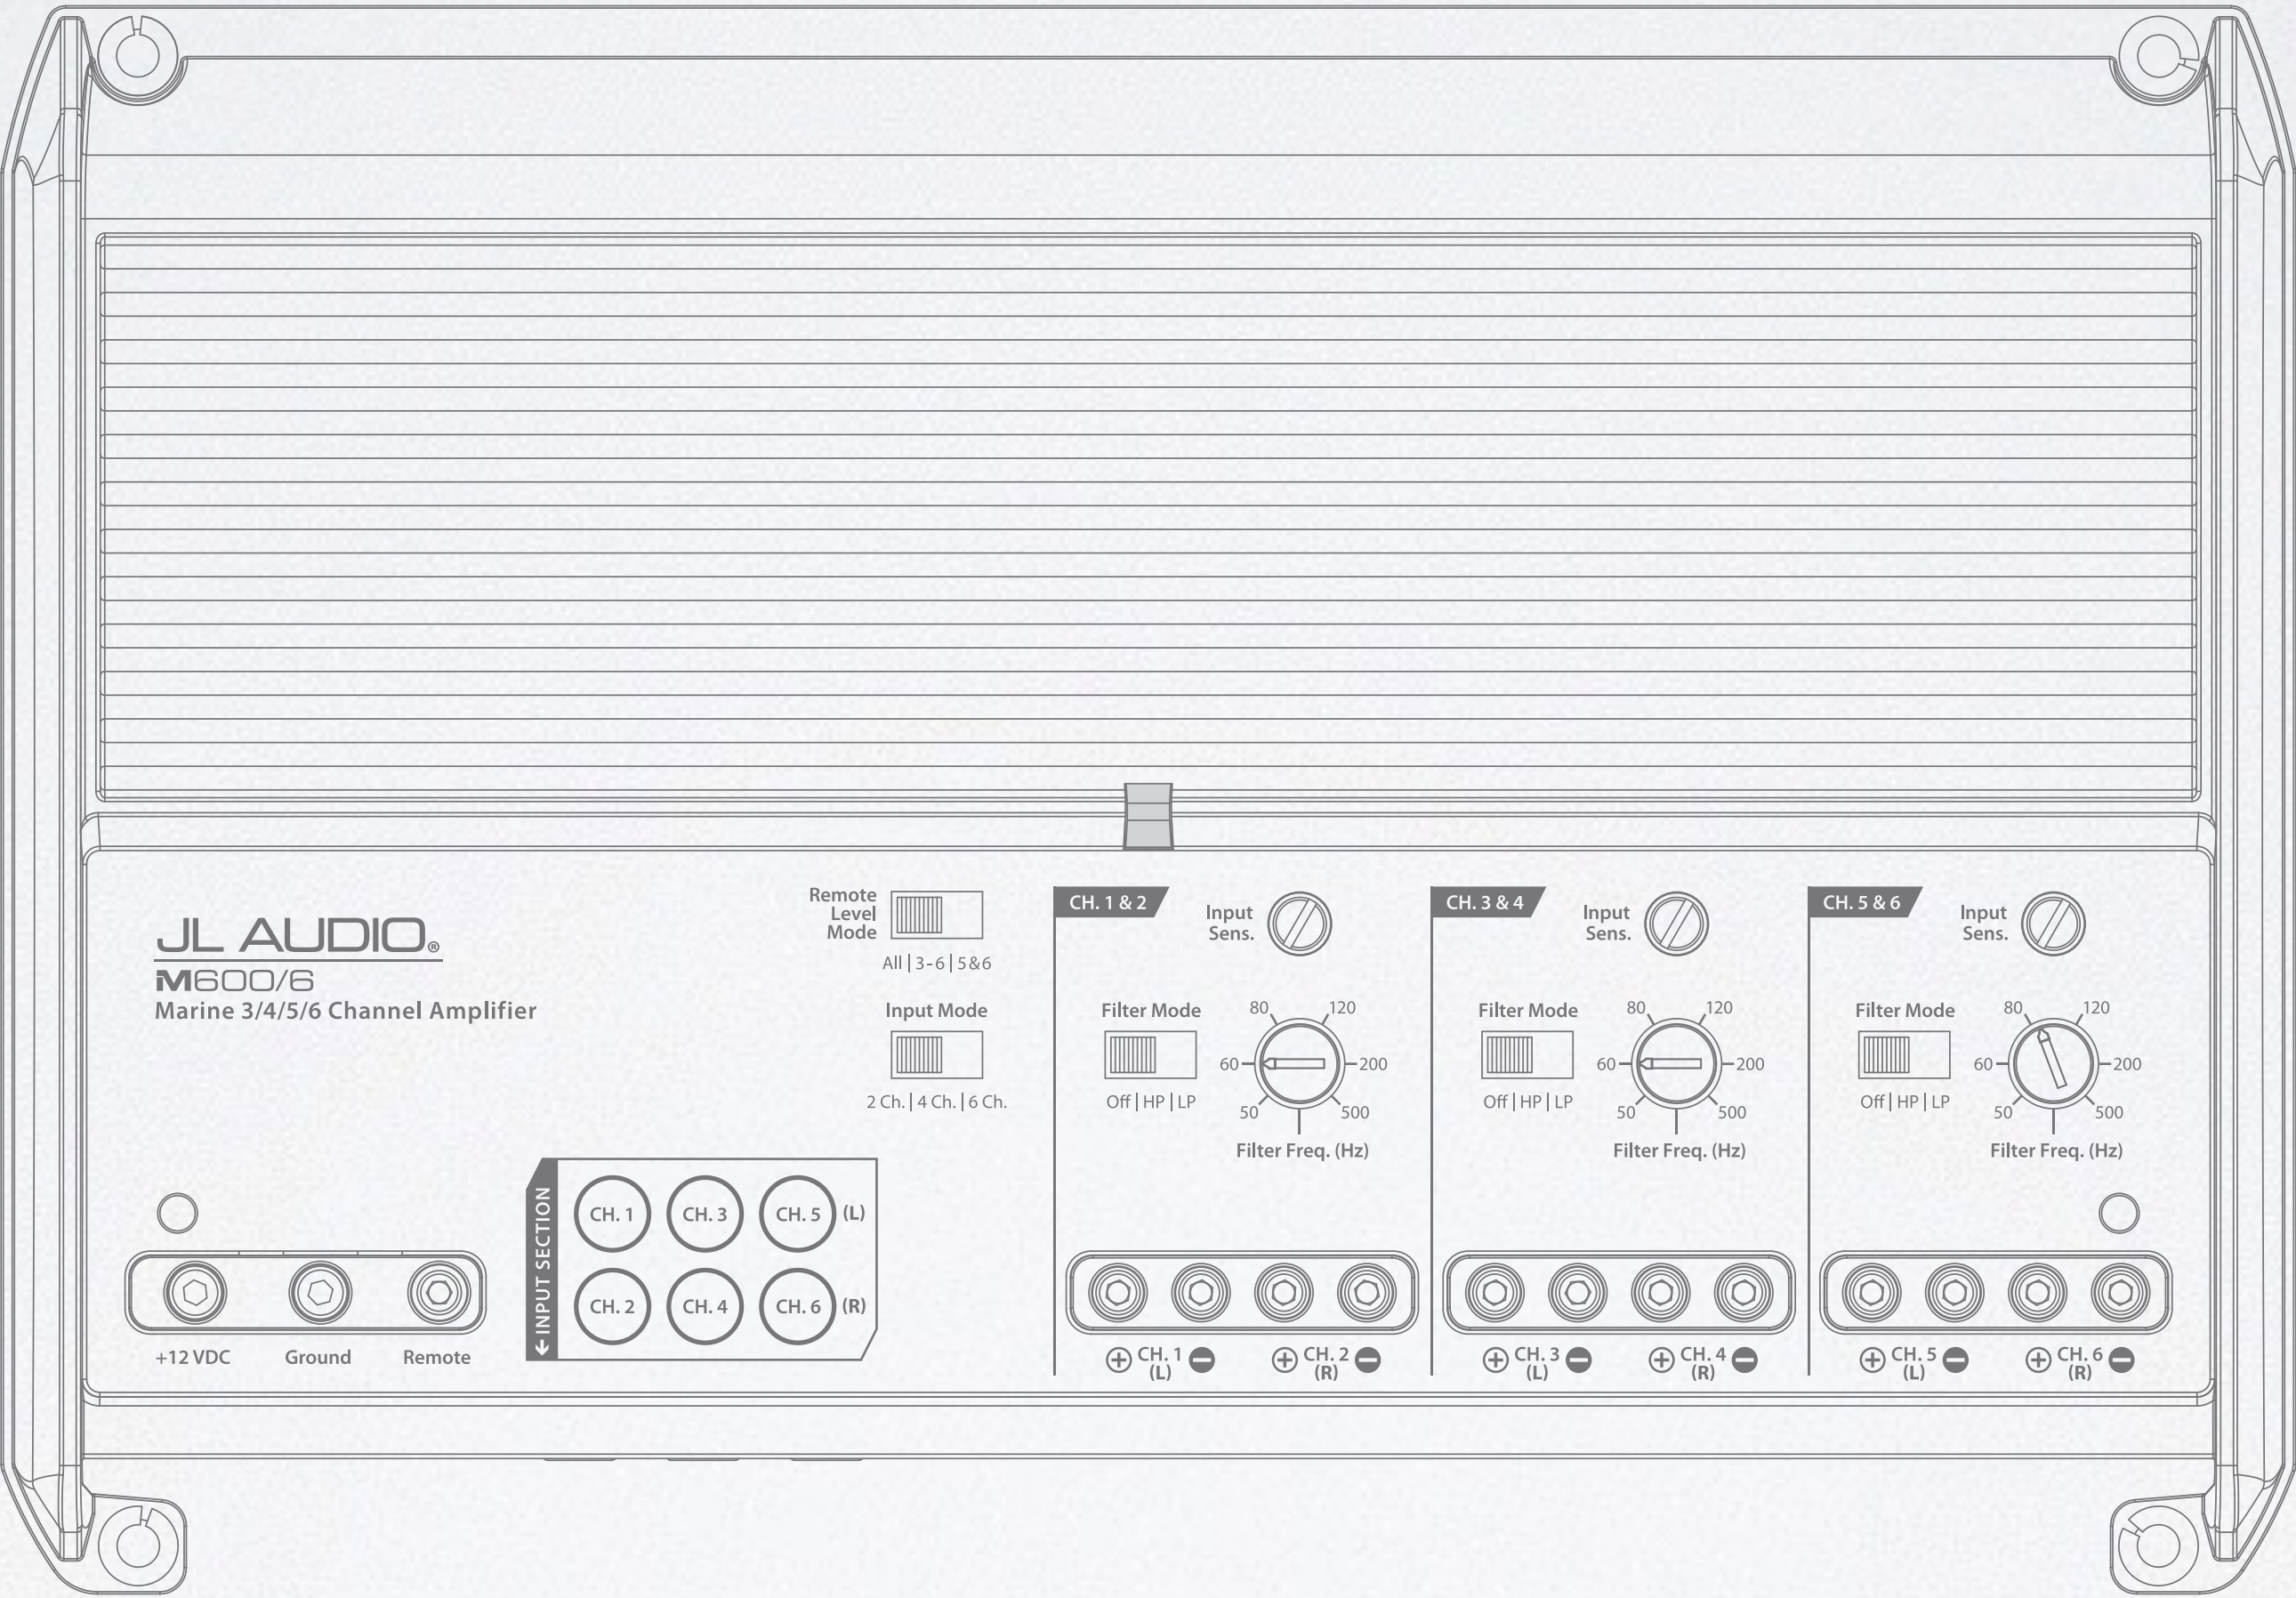



Area of the Curve®

M600/6 Control Panel

JL AUDIO®

M600/6

Marine 3/4/5/6 Channel Amplifier

Remote
Level
Mode



All | 3-6 | 5&6

Input Mode



2 Ch. | 4 Ch. | 6 Ch.

← INPUT SECTION



+12 VDC

Ground

Remote

CH. 1 & 2


Input
Sens.




Filter Mode



Off | HP | LP

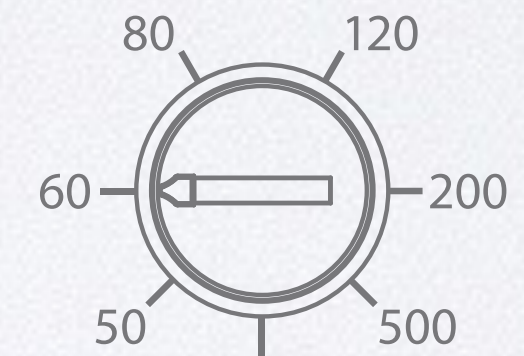

Filter Freq. (Hz)

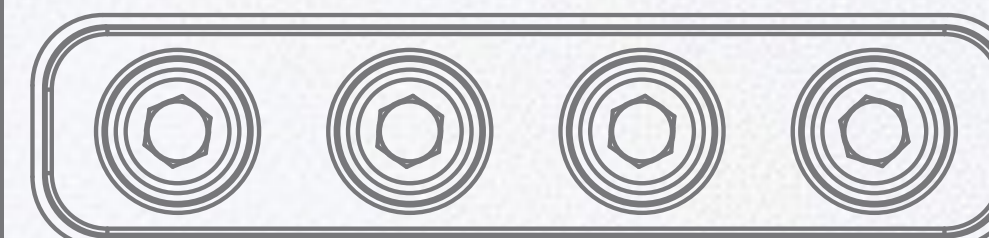


⊕ CH. 1 (L) ⊖

⊕ CH. 2 (R) ⊖

CH. 3 & 4


Input
Sens.

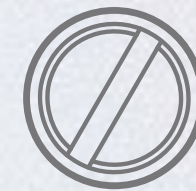


Filter Mode



Off | HP | LP

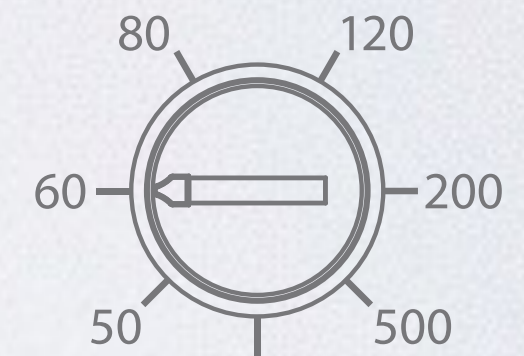

Filter Freq. (Hz)

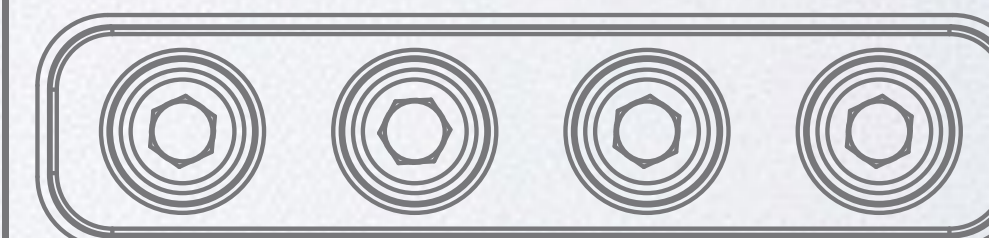


⊕ CH. 3 (L) ⊖

⊕ CH. 4 (R) ⊖




M600/6 Control Detail

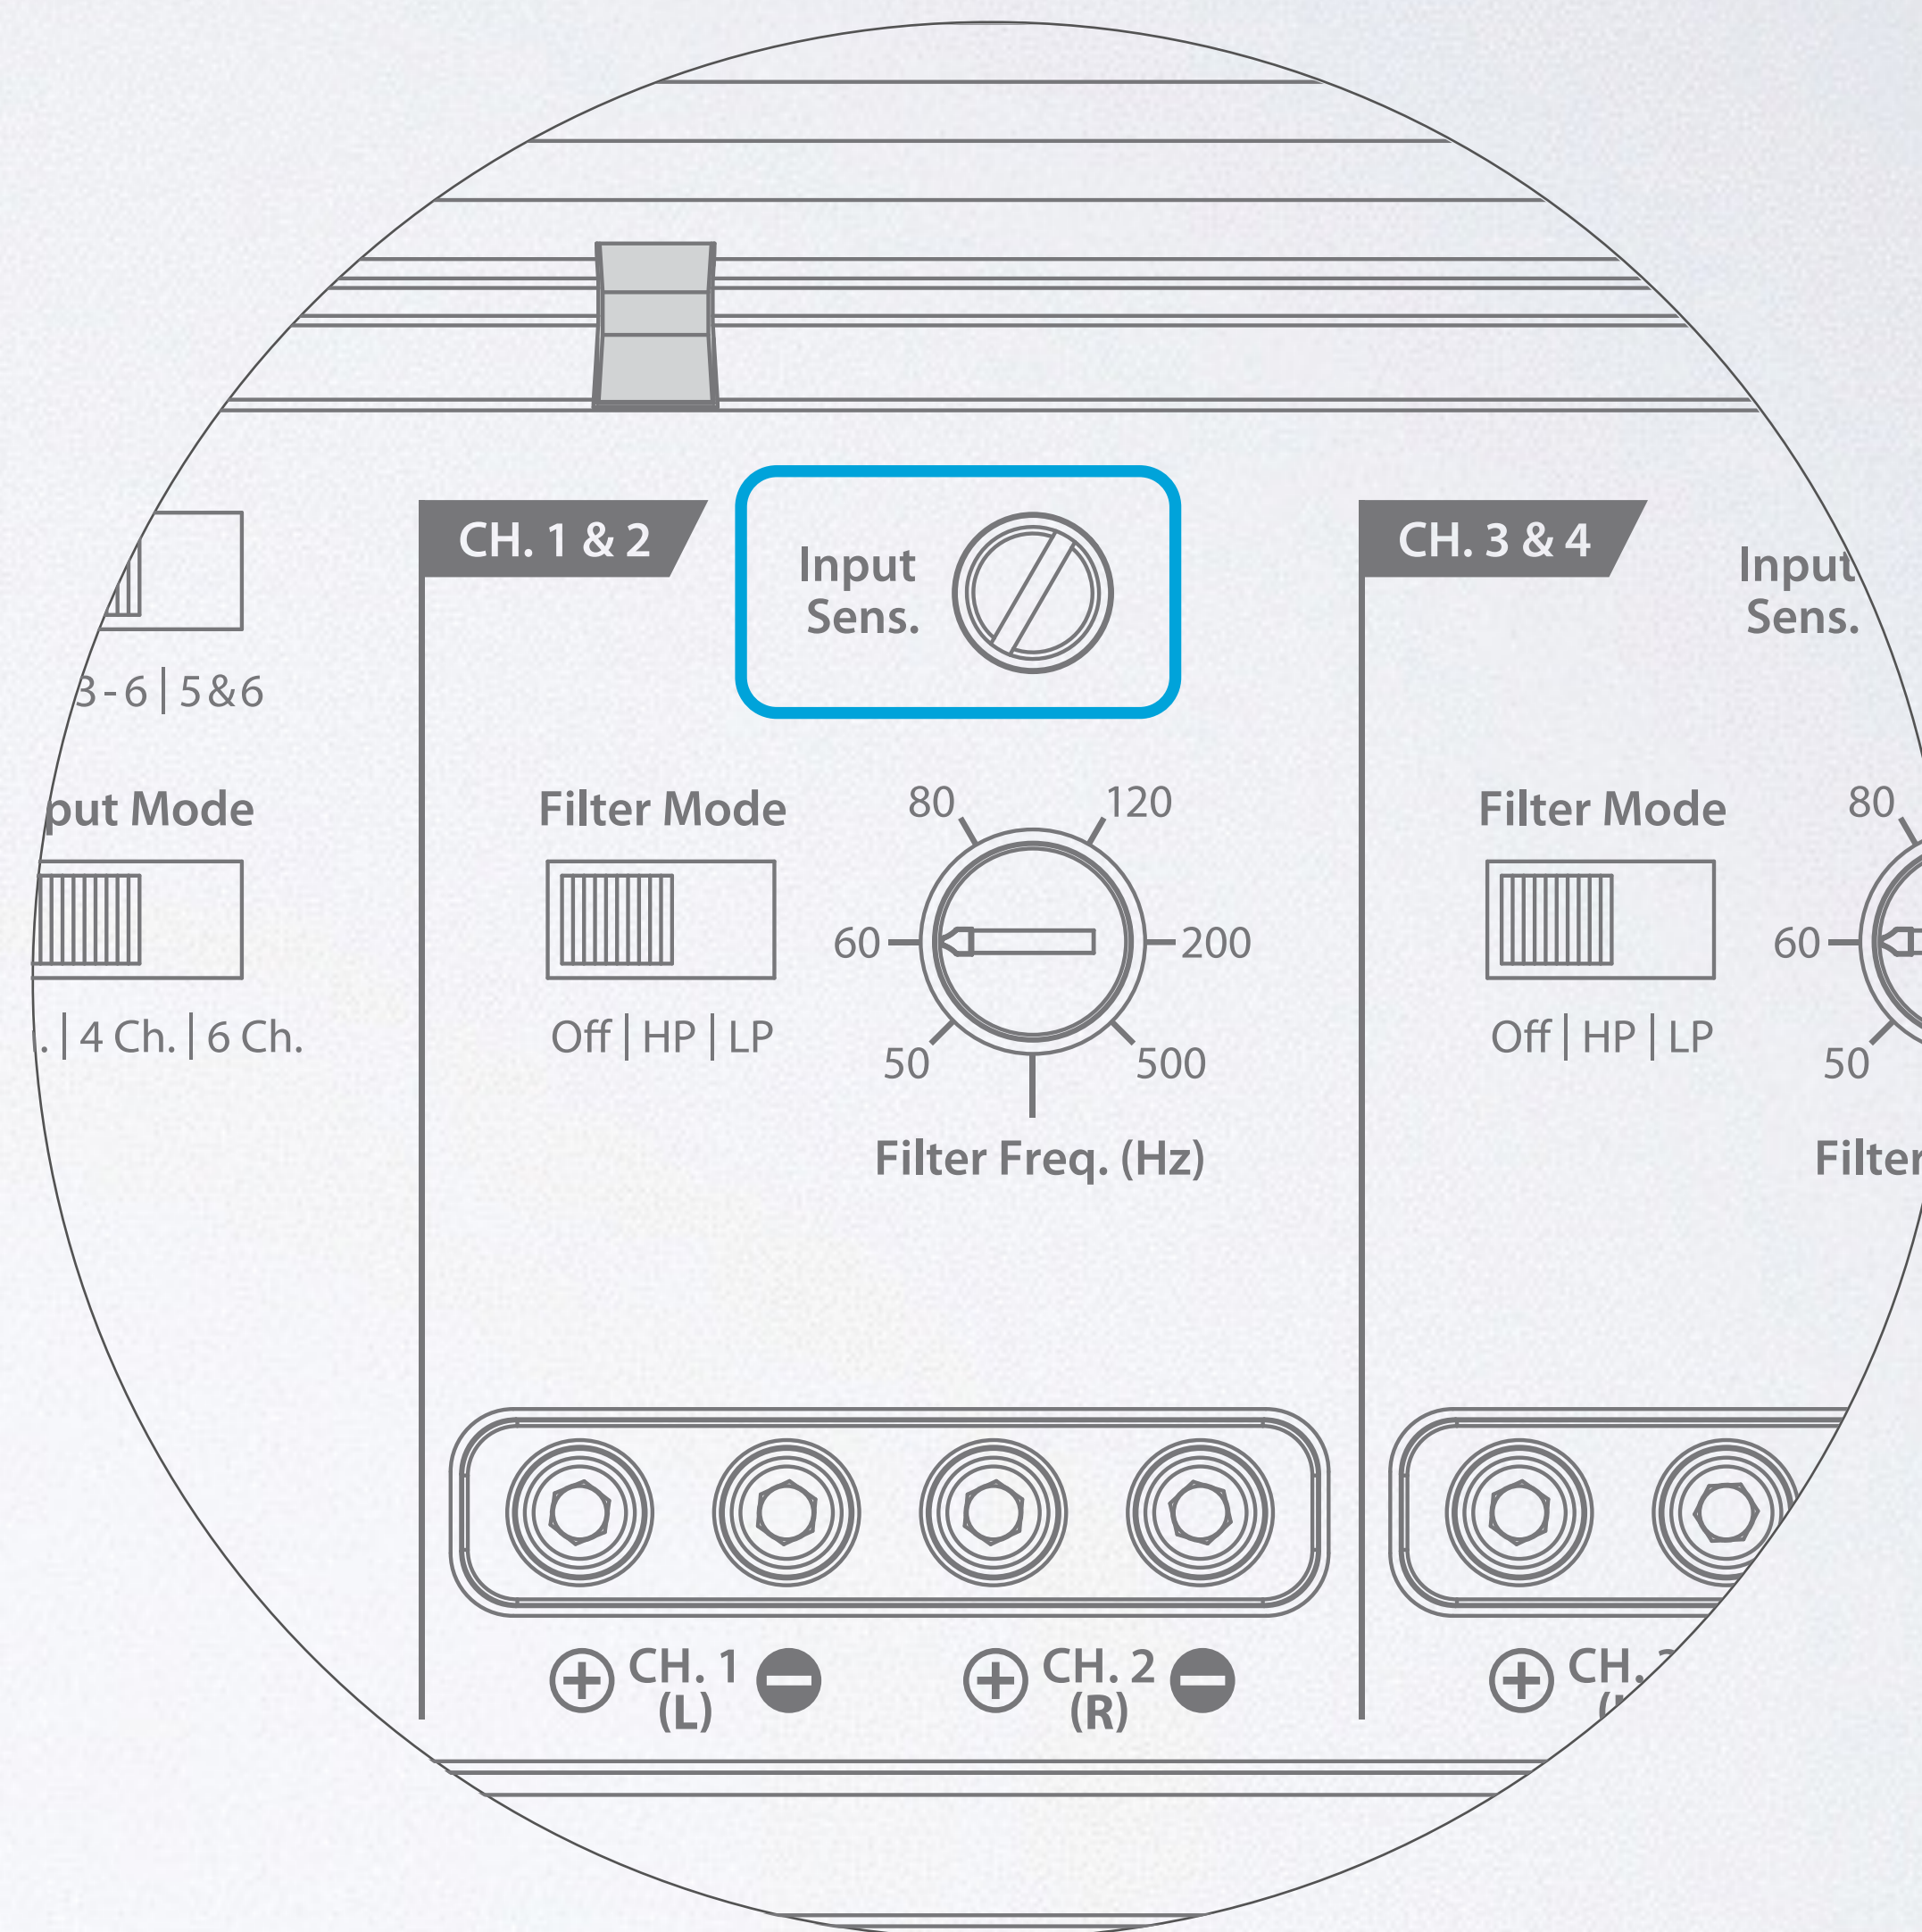



M600/6 Control Detail

- Input Sensitivity (Gain)

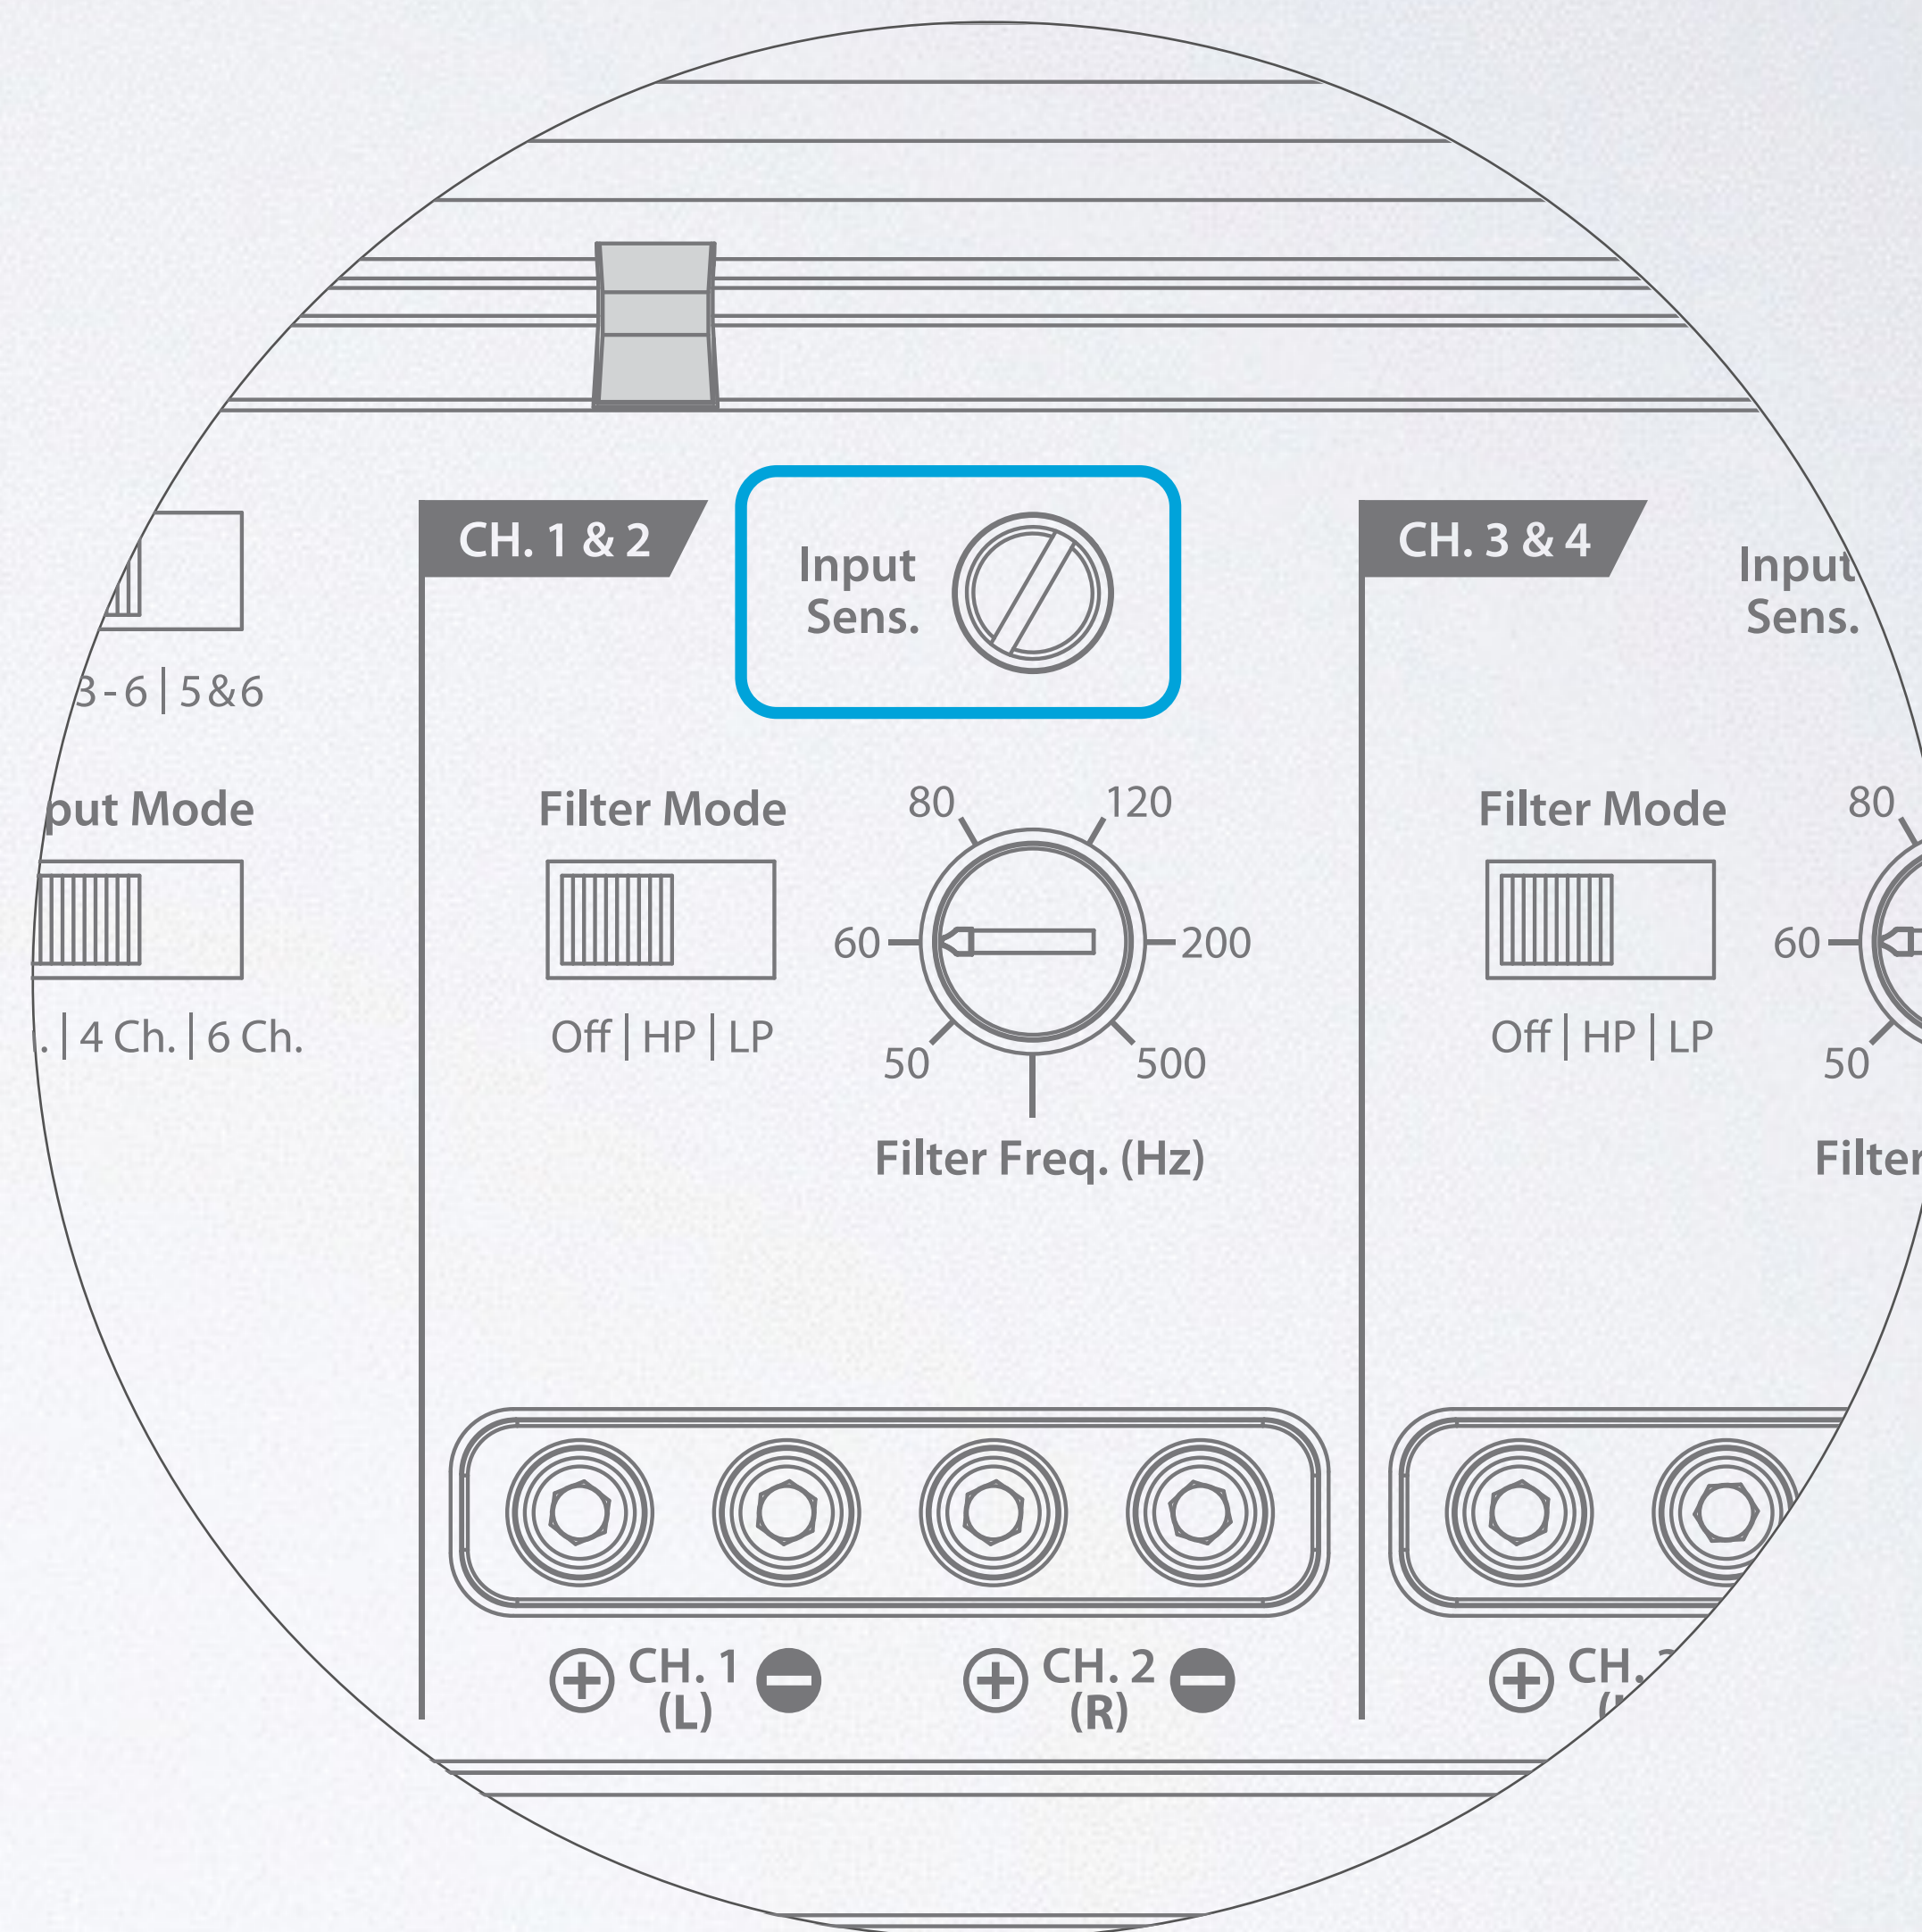




What is a Gain Control?



 M600/6 Control Panel

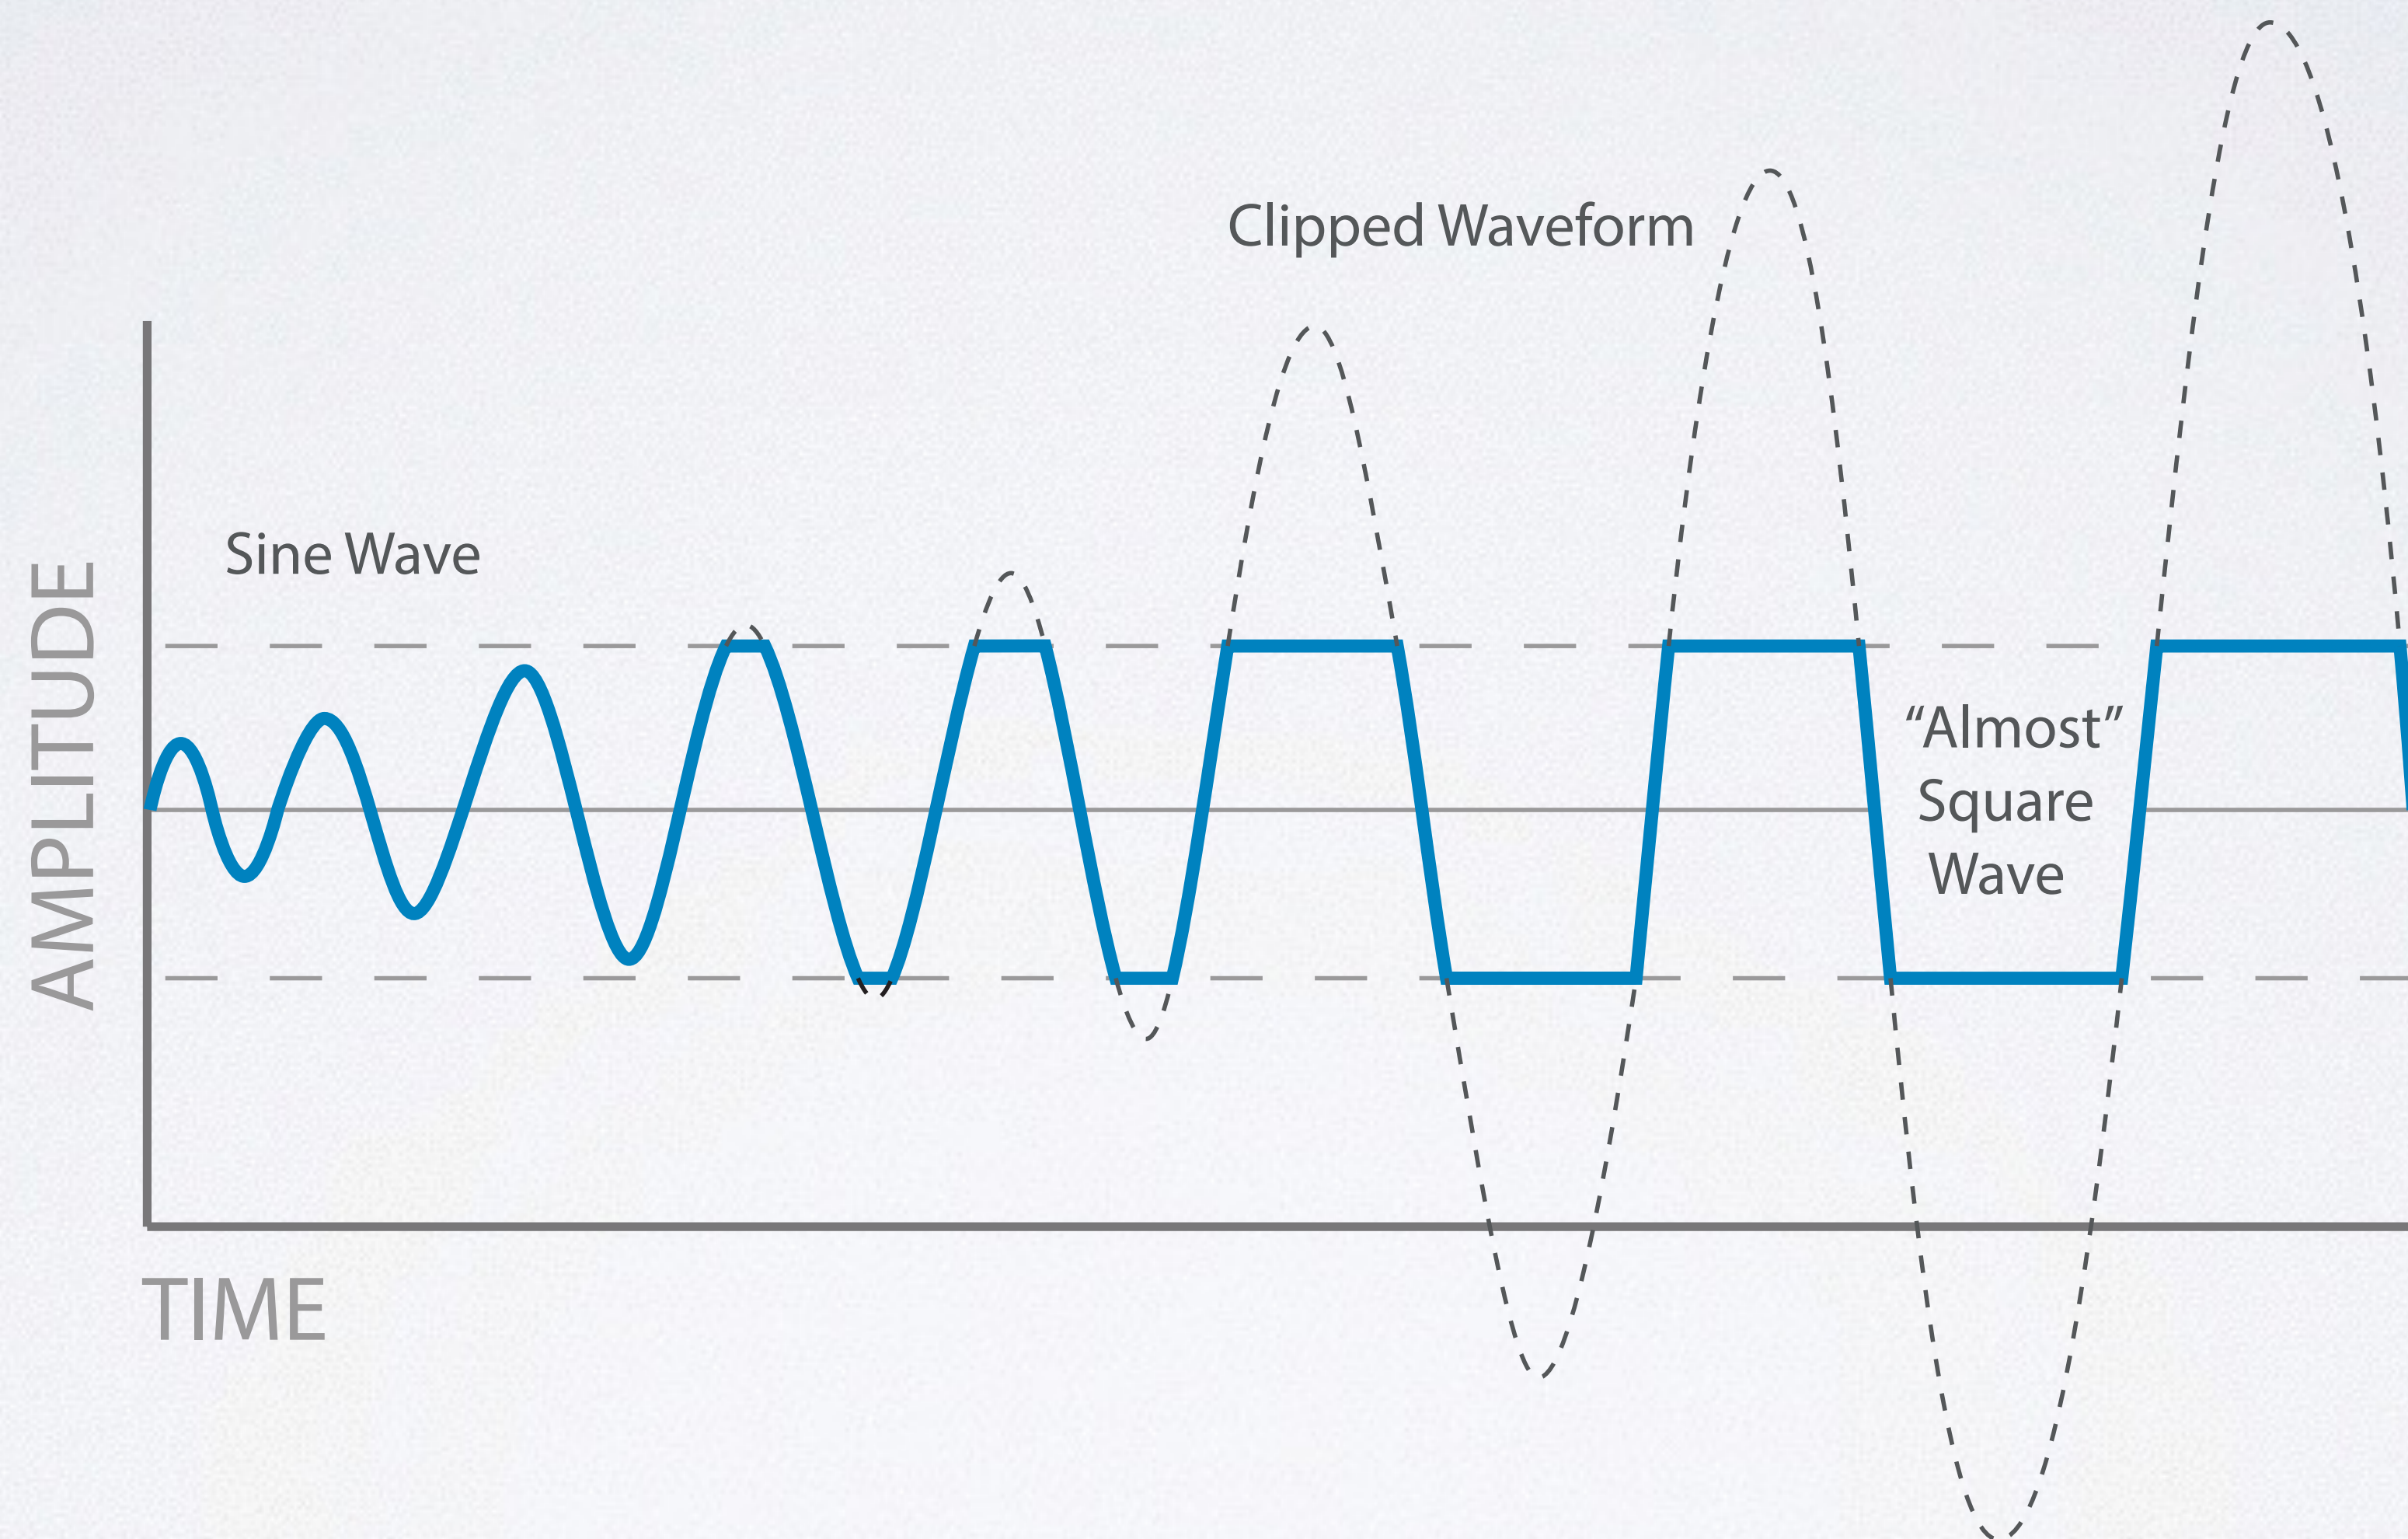




Ahead of the Curve®

Demo



M600/6 Control Panel

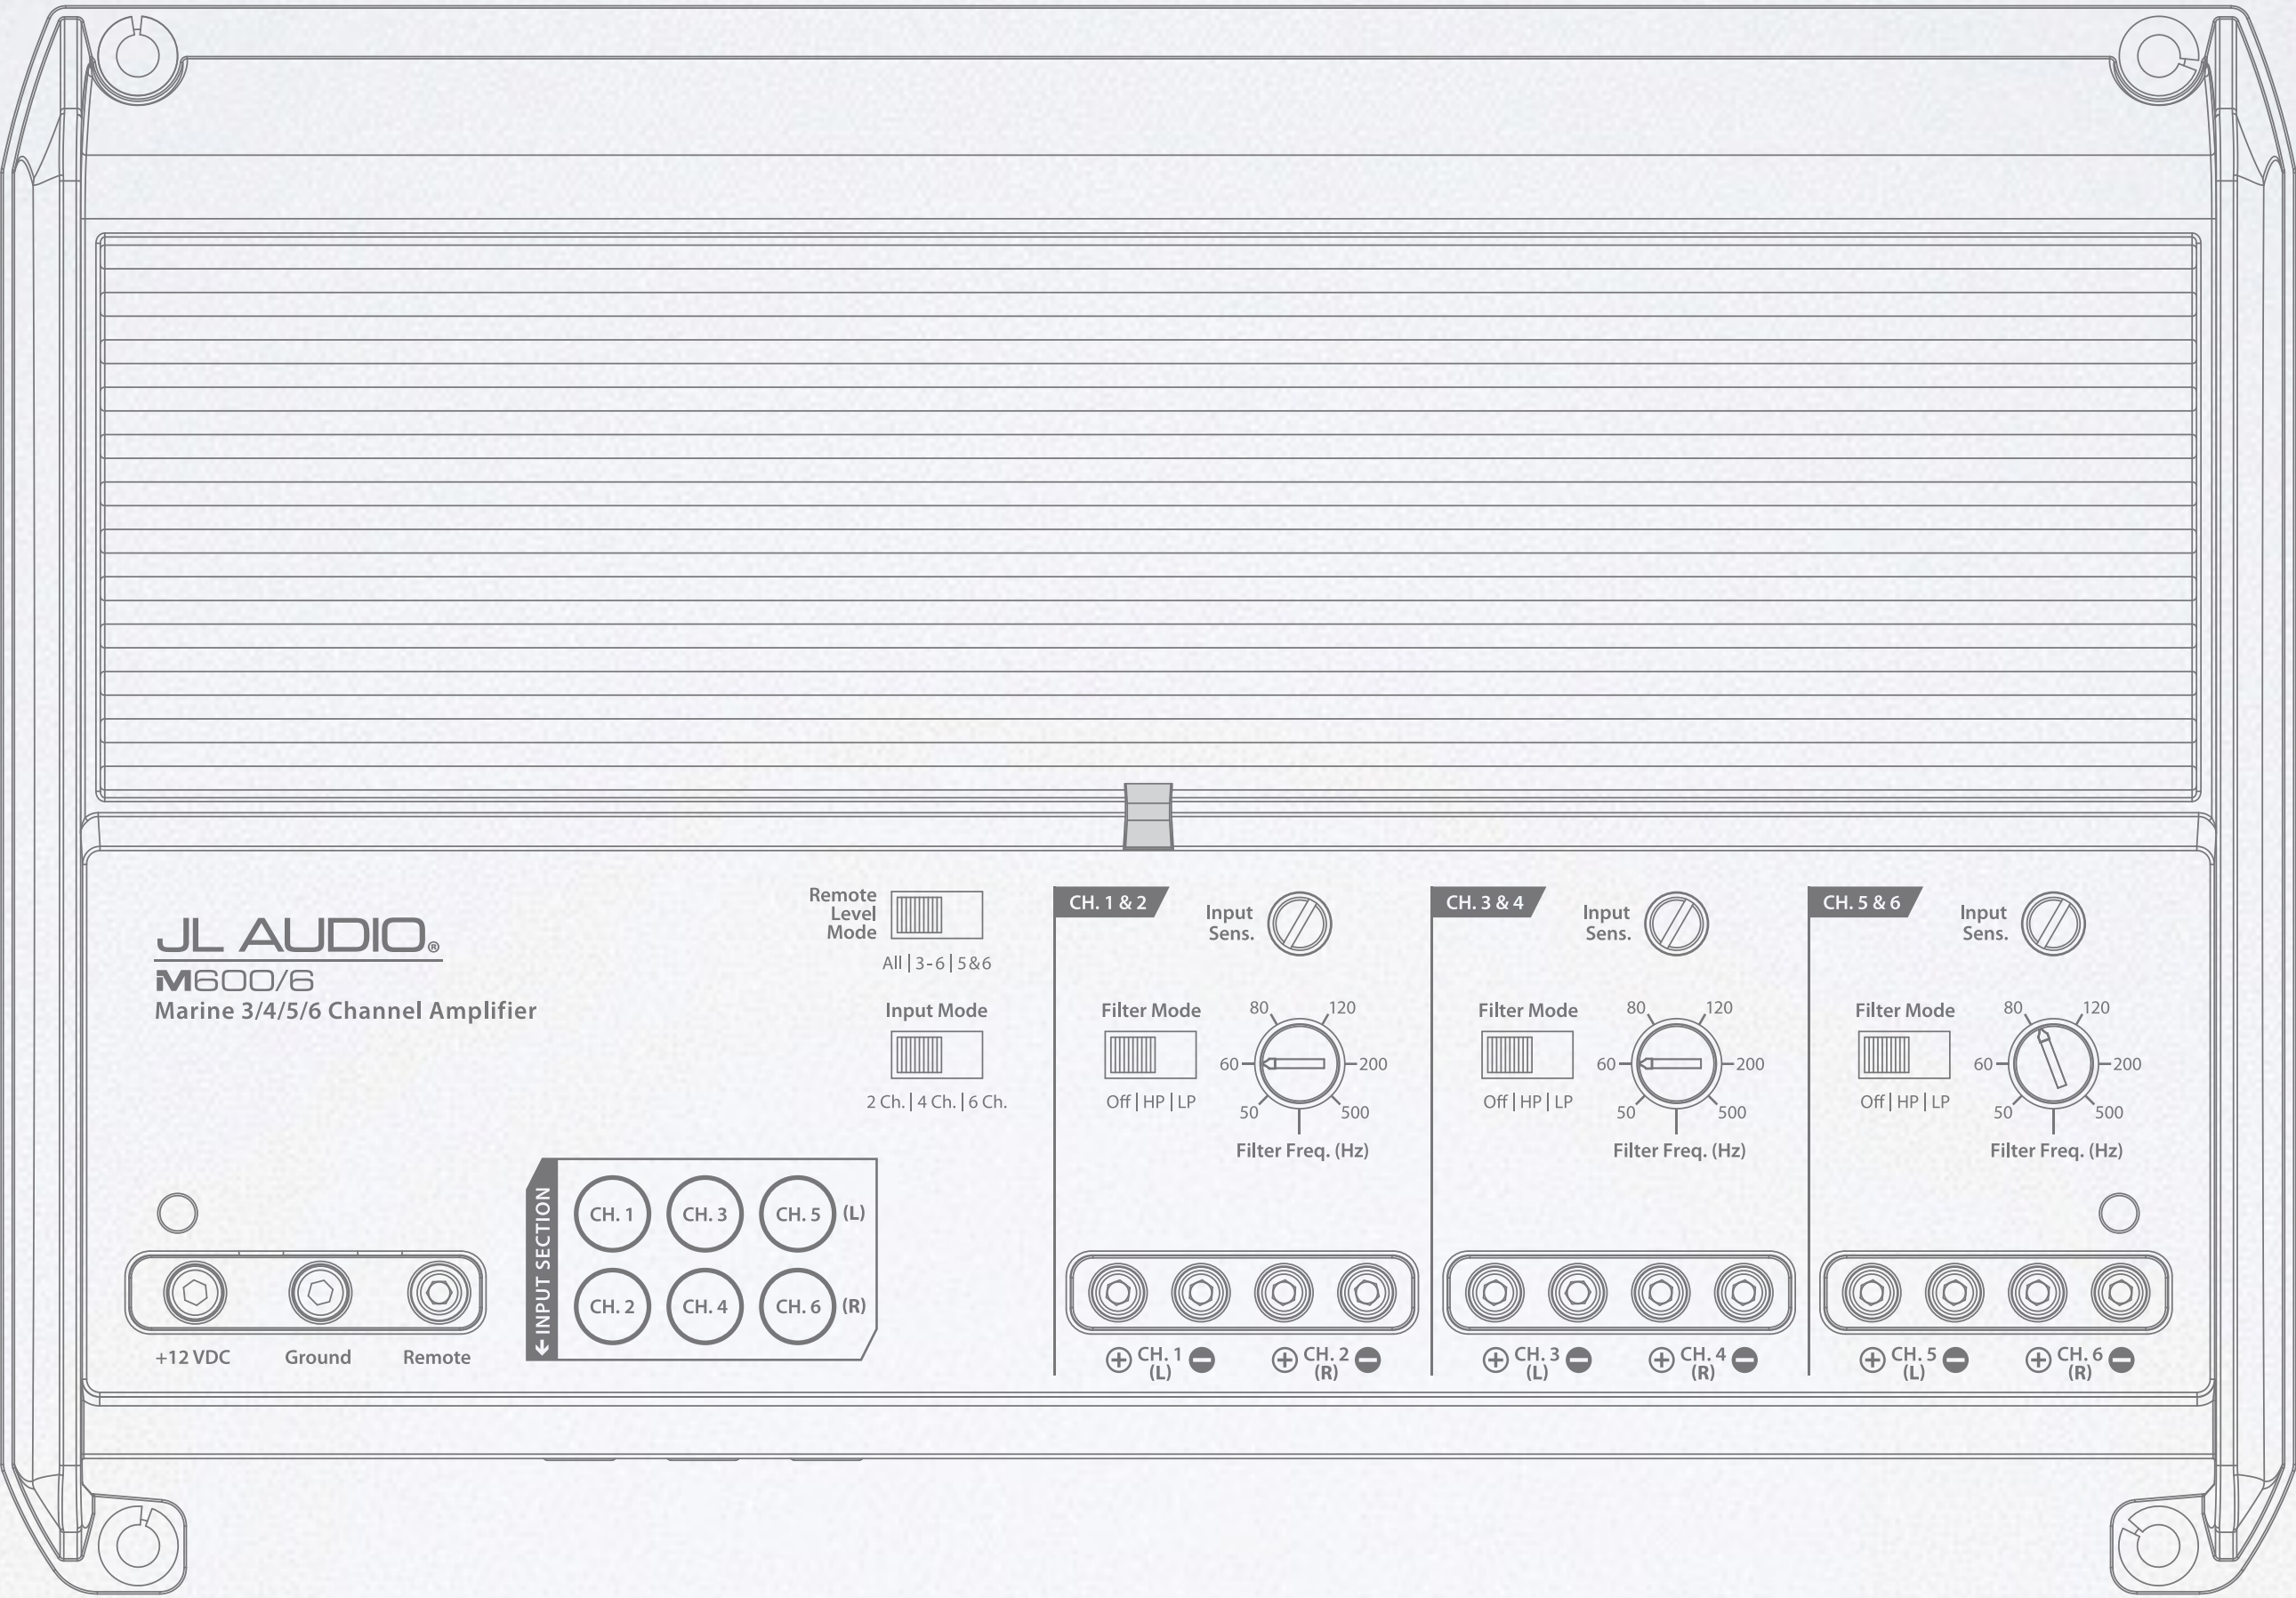



M600/6 Control Panel

JL AUDIO®

M600/6

Marine 3/4/5/6 Channel Amplifier

Remote Level Mode



All | 3-6 | 5&6

Input Mode



2 Ch. | 4 Ch. | 6 Ch.

← INPUT SECTION

CH. 1


CH. 3

CH. 5 (L)

CH. 2

CH. 4

CH. 6 (R)

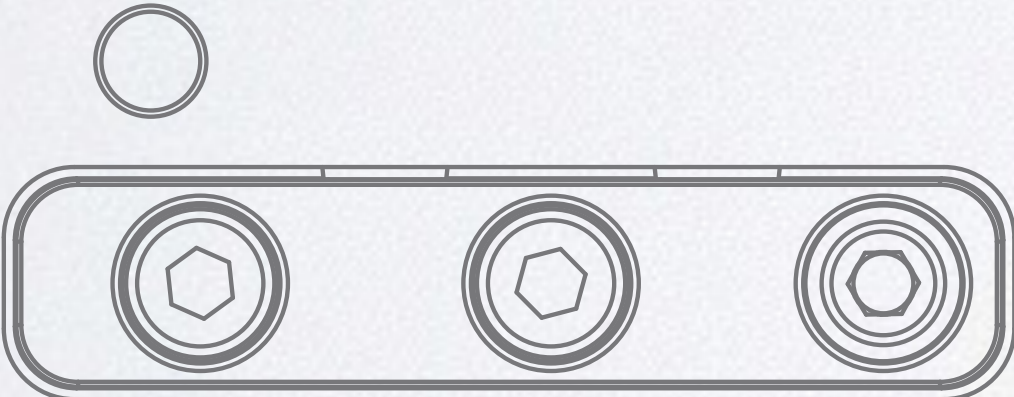

+12 VDC

Ground

Remote

CH. 1 & 2


Input Sens.




Filter Mode



Off | HP | LP

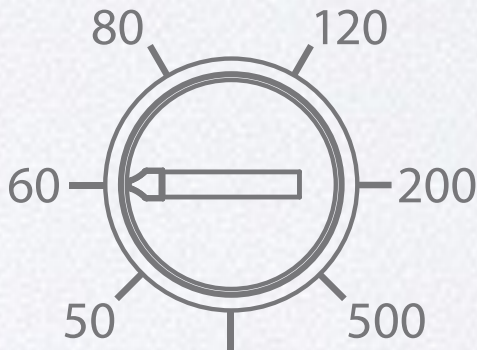

Filter Freq. (Hz)

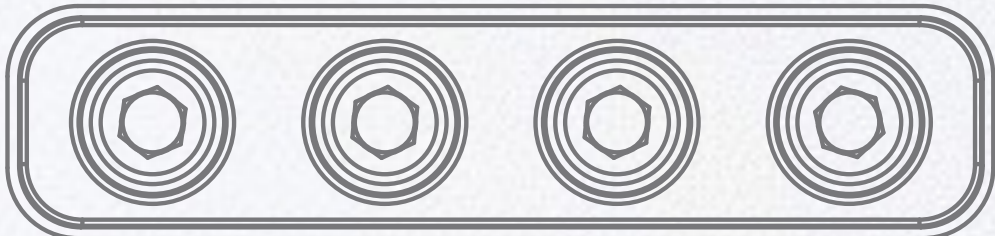

⊕ CH. 1 (L) ⊖

⊕ CH. 2 (R) ⊖

CH. 3 & 4


Input Sens.




Filter Mode



Off | HP | LP

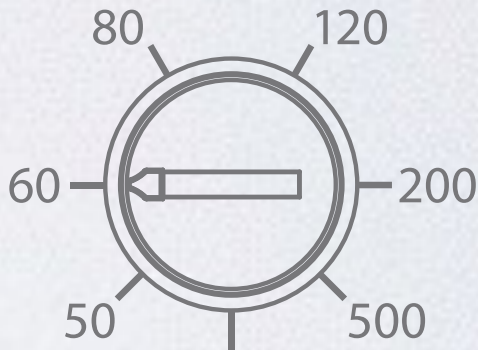

Filter Freq. (Hz)

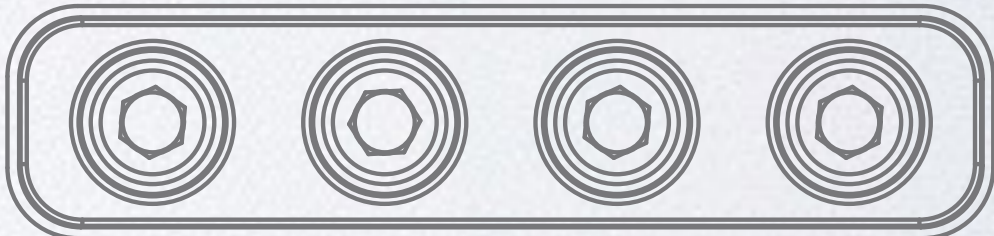


⊕ CH. 3 (L) ⊖

⊕ CH. 4 (R) ⊖




M600/6 Control Detail

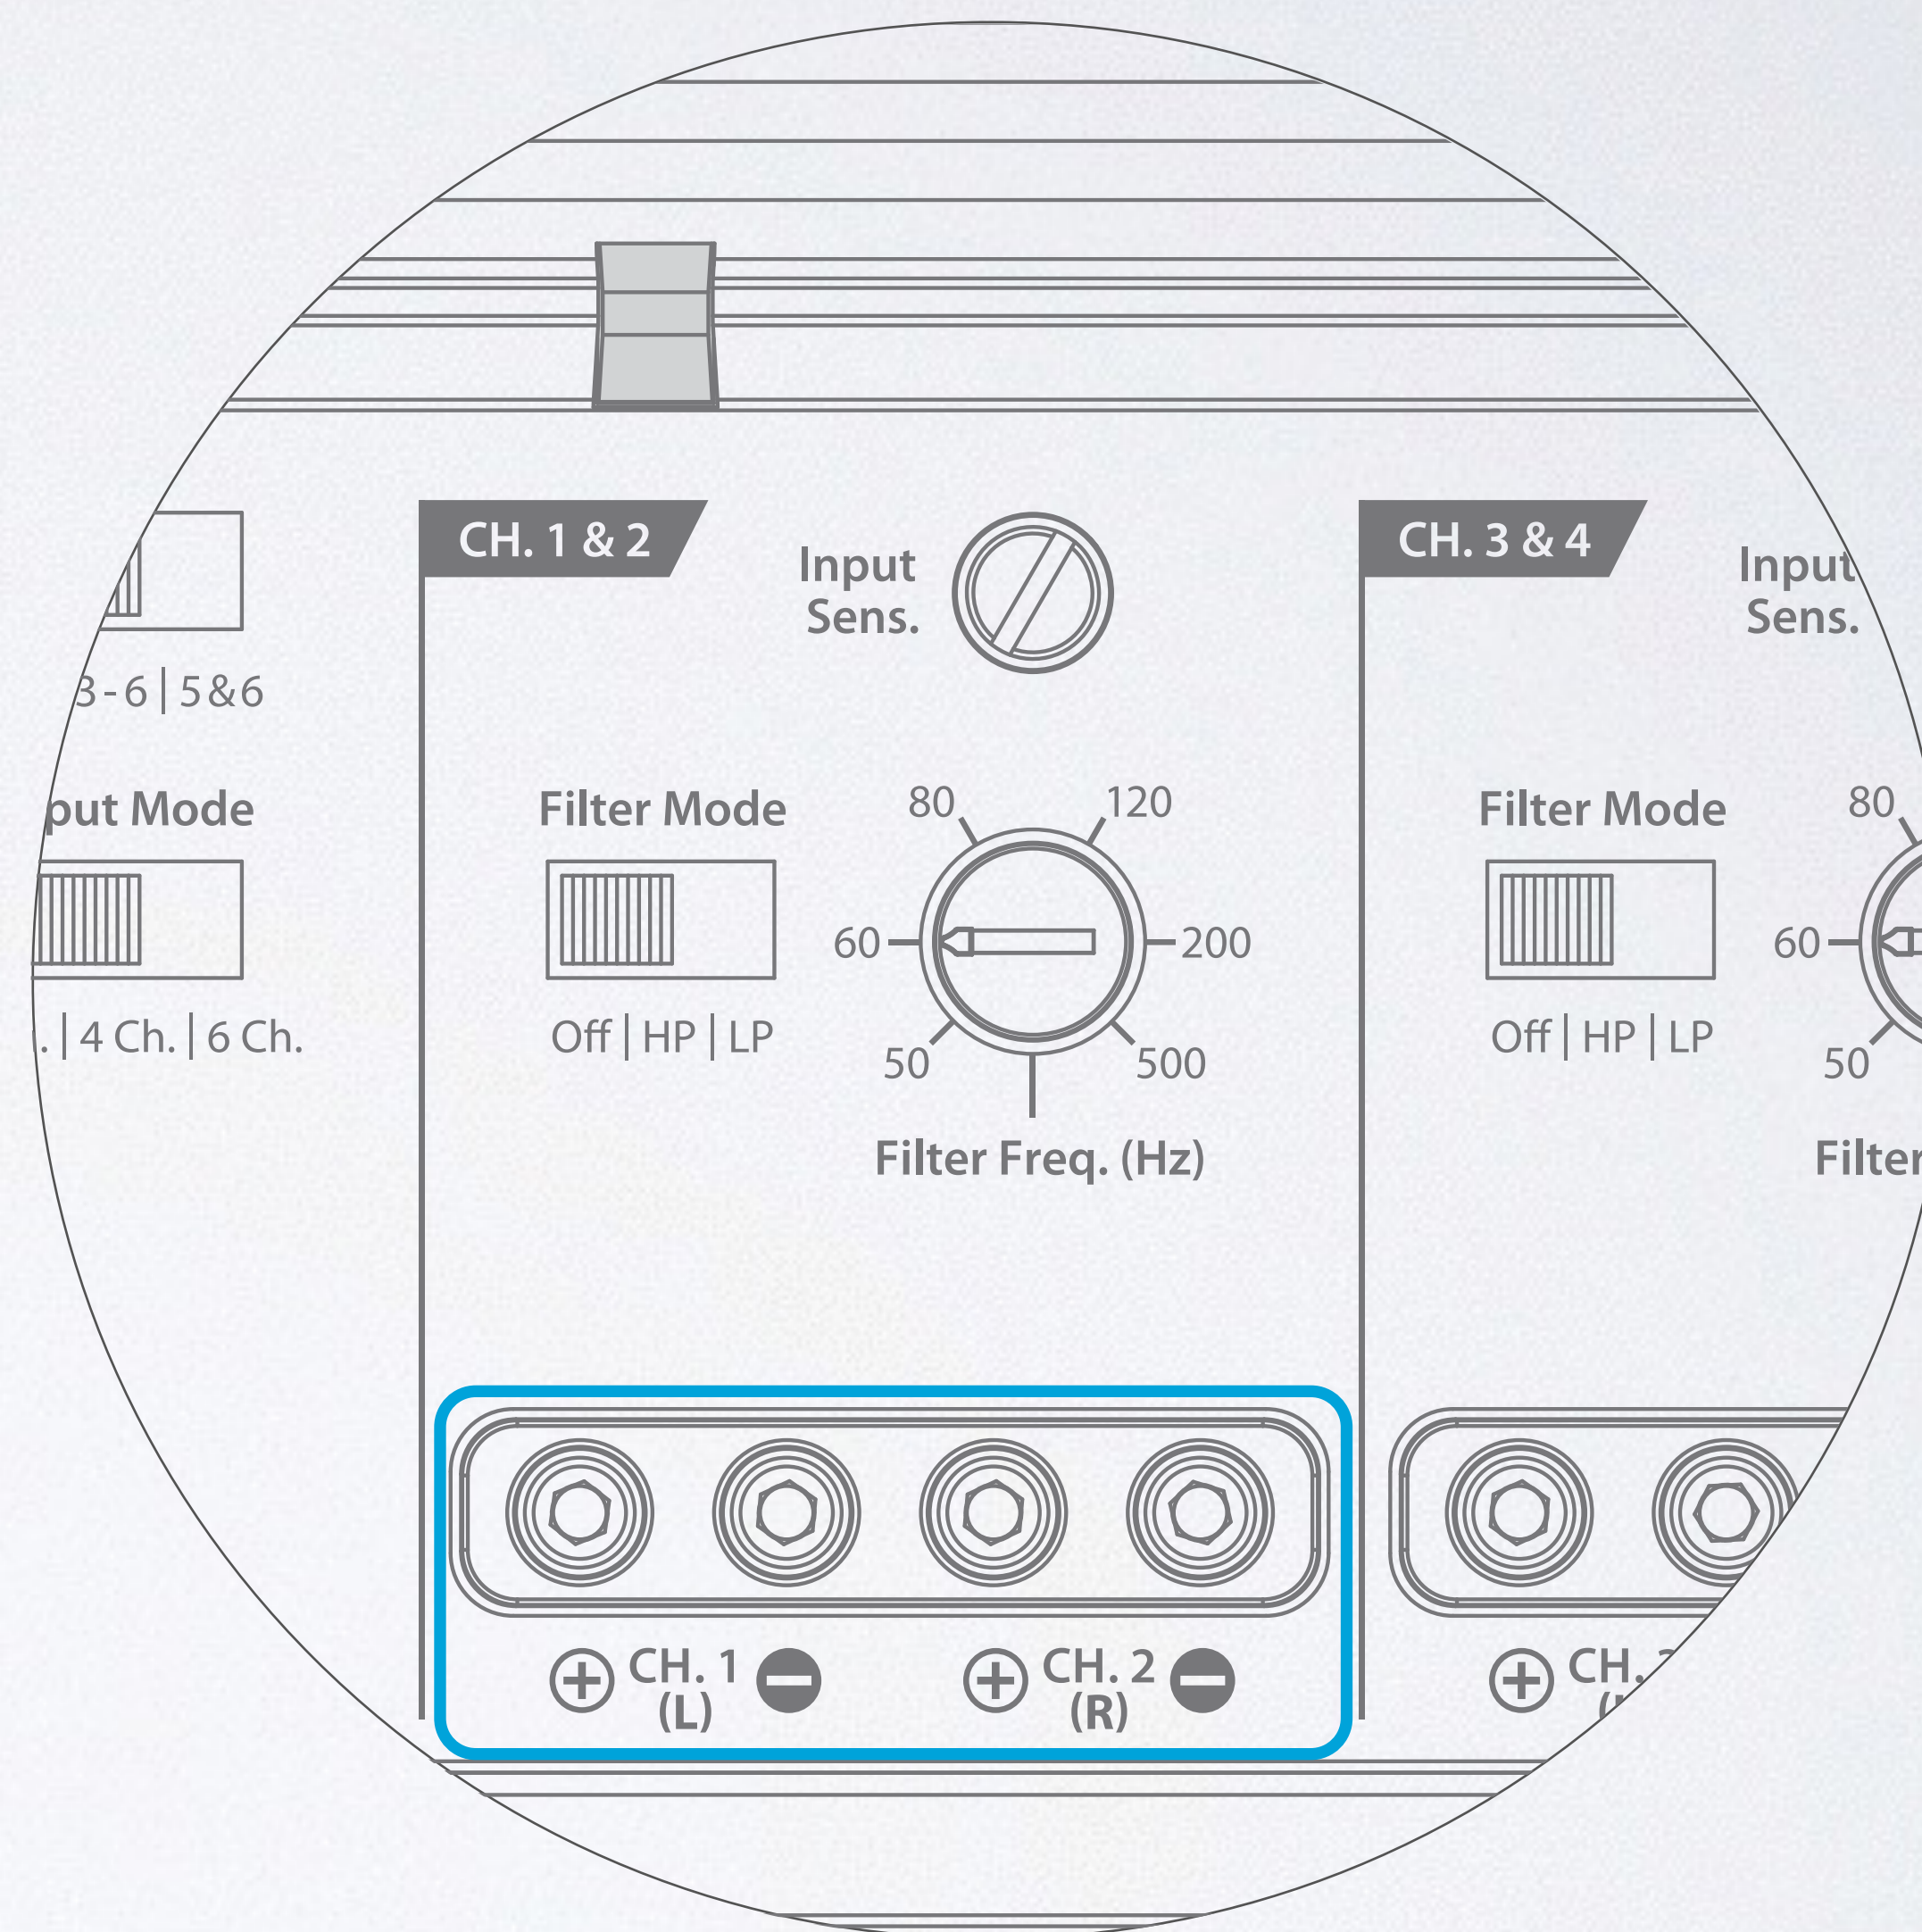




M600/6 Control Detail

- Speaker Connections

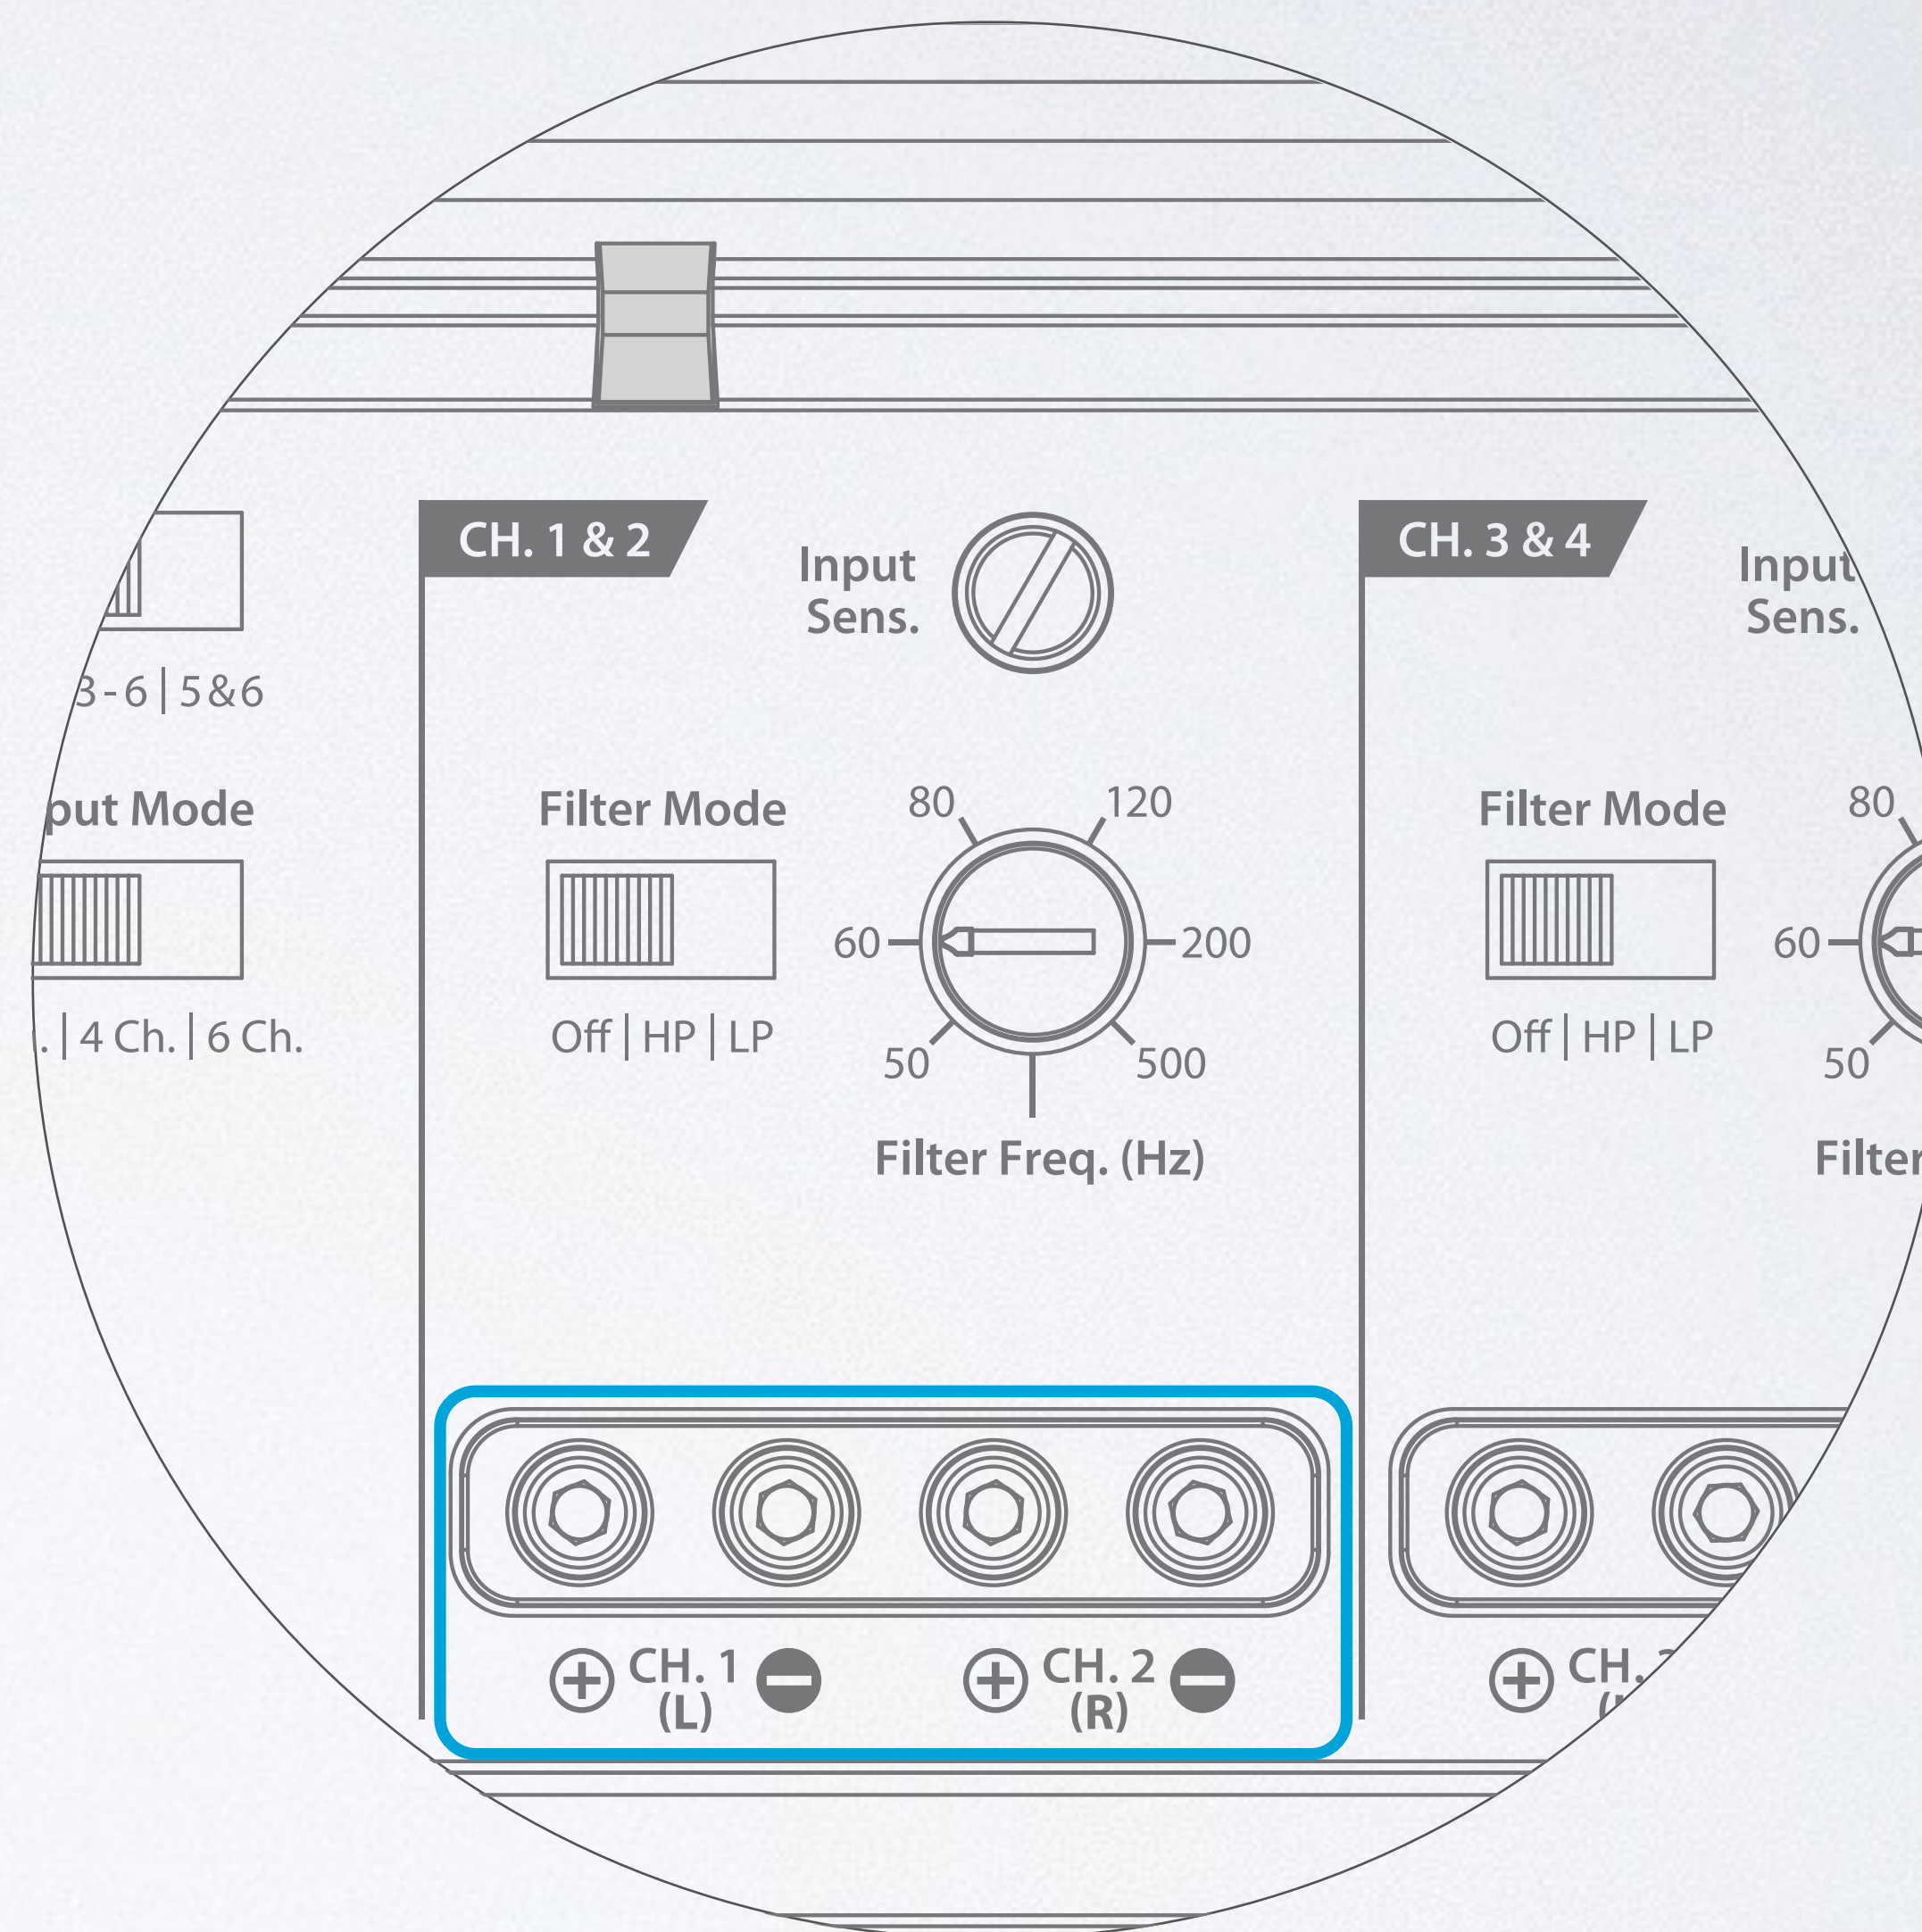

M600/6 Control Detail

- Speaker Connections

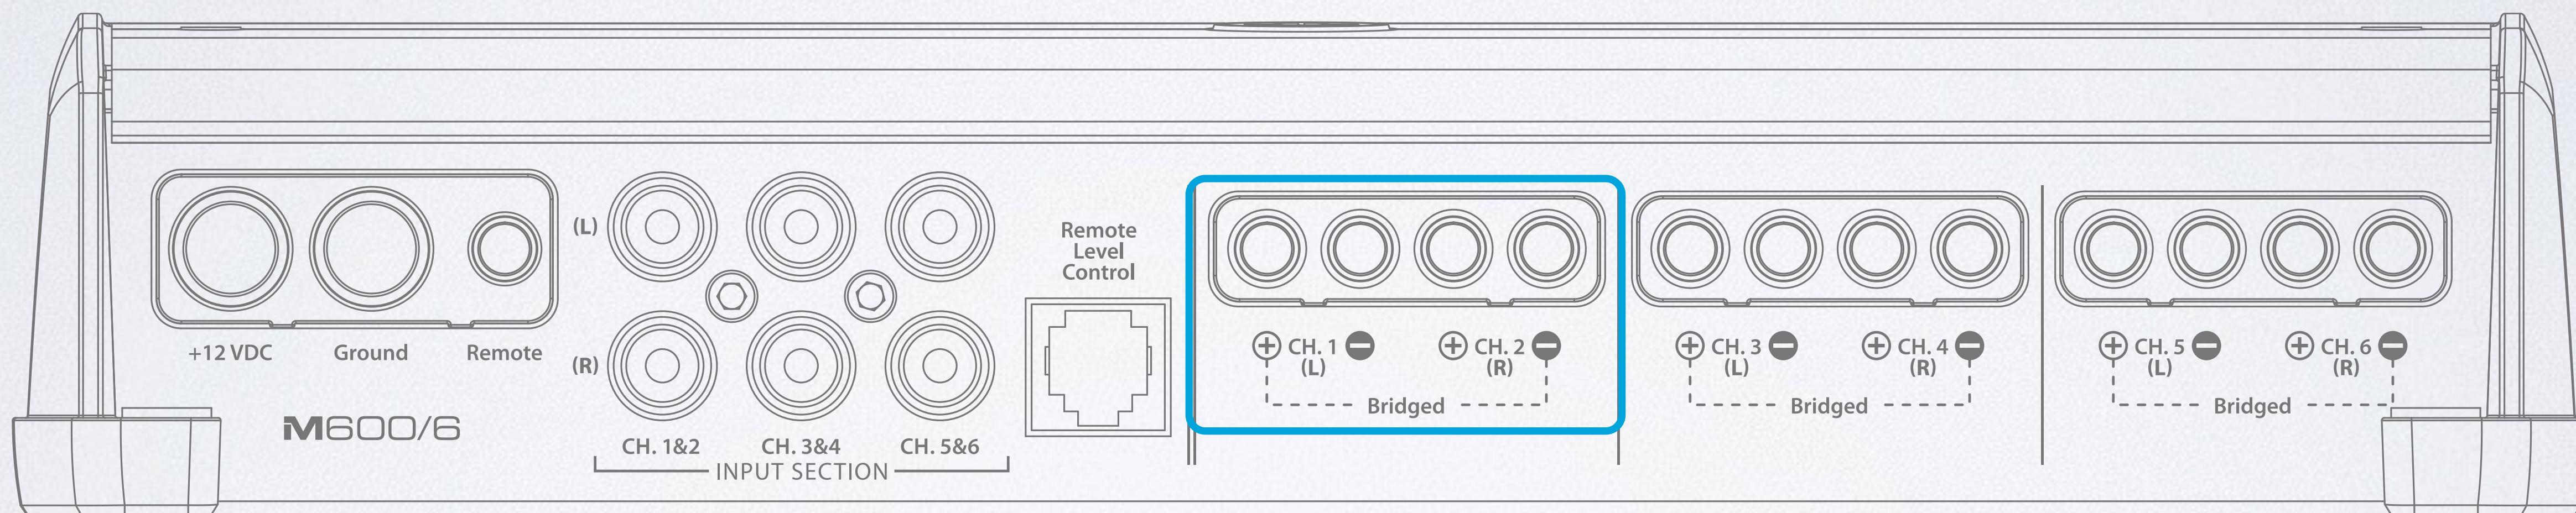



Ahead of the Curve®

Demo



Thank You



Ahead of the Curve®

NAUTIQUE®

JL AUDIO®

M A R I N E