


**ROSWELL.**

www.roswellmarine.com

# Nautique Triton Board Rack

Installation & Usage Instructions

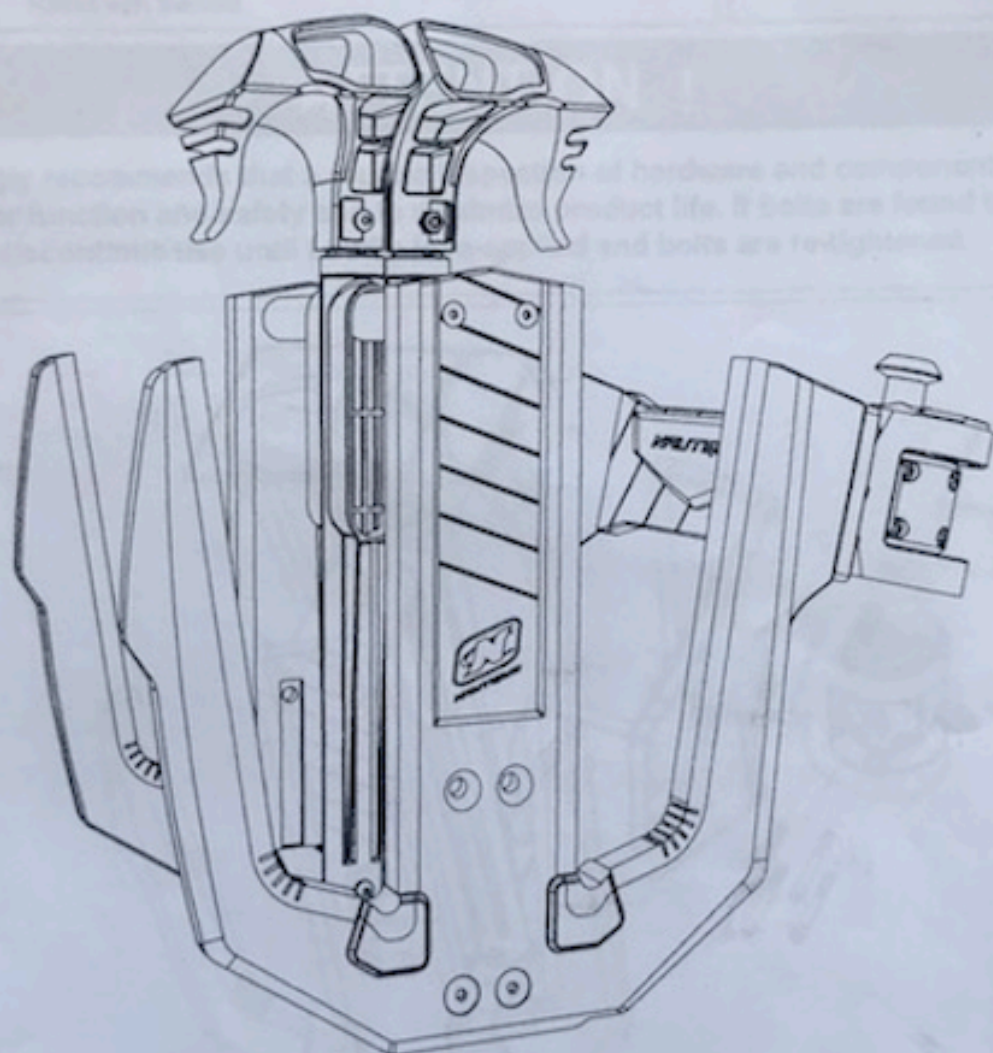


Part # C917-170416

**Information:** [info@roswellglobal.com](mailto:info@roswellglobal.com)

If you have any questions please call : 1-321-638-1331




## PACKAGE CONTENTS

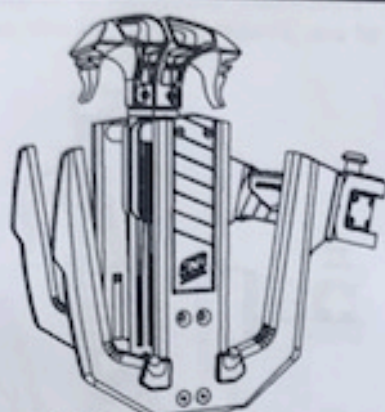

(x2) Nautique Triton Board Racks with Swivels




## TOOLS NEEDED

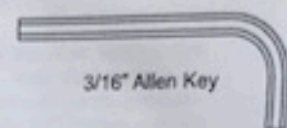

3/16" Allen Key

Torque wrench  
with 3/16"  
Allen bitLOCTITE  
THREADLOCKER  
RED**! ATTENTION !**

Roswell strongly recommends that a routine inspection of hardware and components be done to ensure proper function and safety and to maximize product life. If bolts are found to be loose, discontinue use until Loctite is re-applied and bolts are re-tightened.

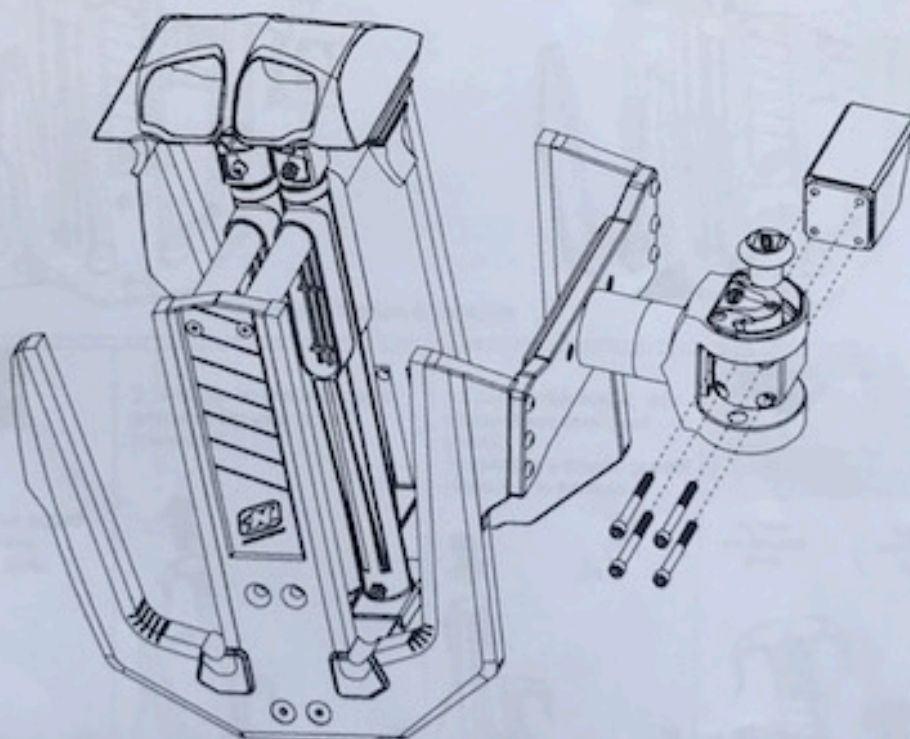**A**Torque bolts  
to 15ft-lb

x8




Carefully remove your Nautique Triton racks from the packaging. Mount one to each swivel block on either side of your tower using the hardware provided. The racks are not side specific. Apply red Loctite to all 8 bolts first.



## A

Your Triton rack is designed to be adjustable to fit just about any size of wakeboard, wakesurfer or wakeskate. There are 2 settings, one for narrower boards, one for wider boards.

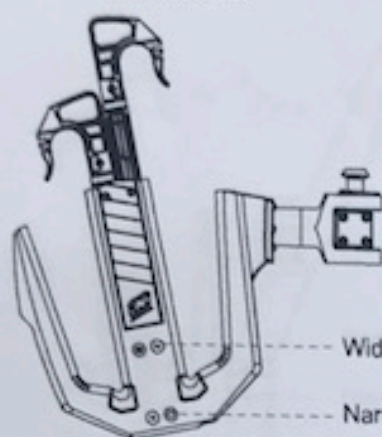

Wide board setting

Narrow board setting

In the narrow setting, the max board width should be no greater than 20" inches and no less than 14" inches.




In the wide setting, the max board width should be no greater than 23" inches and no less than 17" inches.

## B


Adjust your telescopic arms one at a time. To adjust your telescopic arms loosen and remove the bolt on each side of the rack for the same arm. Do not remove all 4 bolts at the same time. Slide the whole arm assembly up or down to the next position. Re-apply red Loctite to the bolts and tighten.



3/16" RED

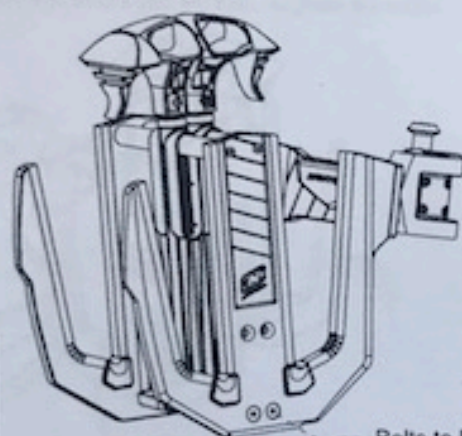

--- Bolts to loosen & remove

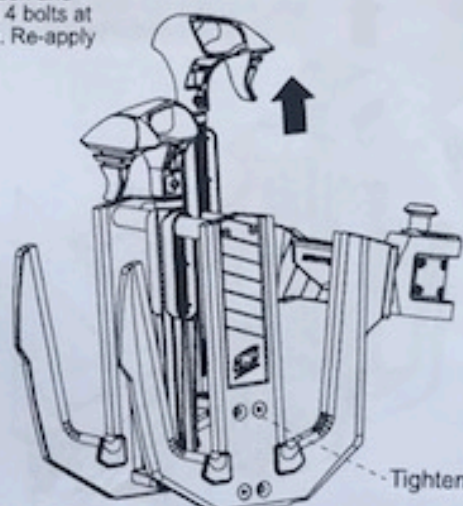


Tighten

## C


### Inserting Boards



1 : Slide your board into one of the Triton rack slots.

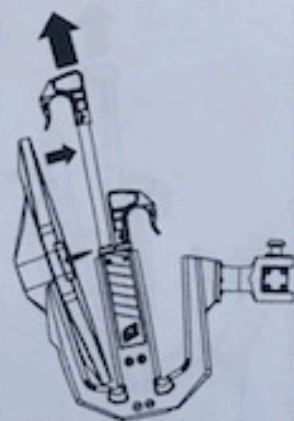


2 : Pull up on the telescopic arm and flip your board towards it.

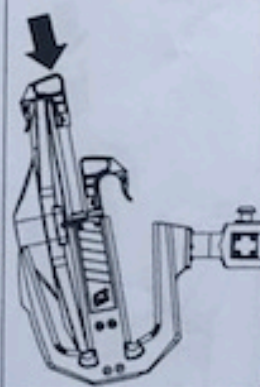

3 : Let the telescopic arm clamp down over your board. To remove a board, repeat steps 1-3 in reverse

Ensure wakeboards with sharper edges are located within the harder rubber wakeboard pads in the line slots. This is essential to avoid damaging the softer foam protection intended for fragile surfboards and wakesurfers.

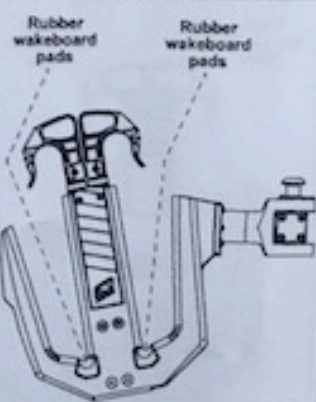


Rubber wakeboard pads

Rubber wakeboard pads



## A


Your Triton rack is designed to be adjustable to fit just about any size of wakeboard, wakesurfer or wakeskate. There are 2 settings, one for narrower boards, one for wider boards.

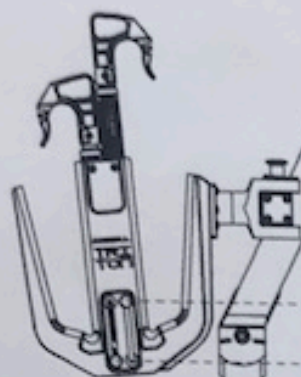

Wide board setting

Narrow board setting

In the narrow setting, the max board width should be no greater than 20" inches and no less than 14" inches.

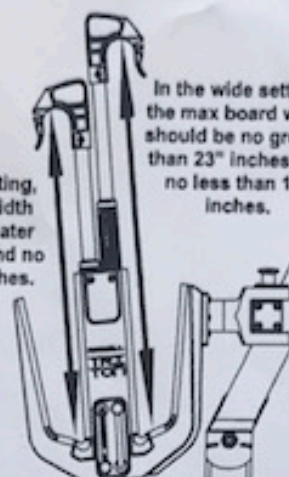


In the wide setting, the max board width should be no greater than 23" inches and no less than 17" inches.


## B

Adjust your telescopic arms one at a time. To adjust your telescopic arms loosen the knobs on both sides of the rack for the same arm until the knobs are past the counterbored holes they sit in. At this point you will be able to slide the whole arm assembly up or down to the next position where you will then retighten the knobs.

Make sure your adjustment knobs are tight periodically.

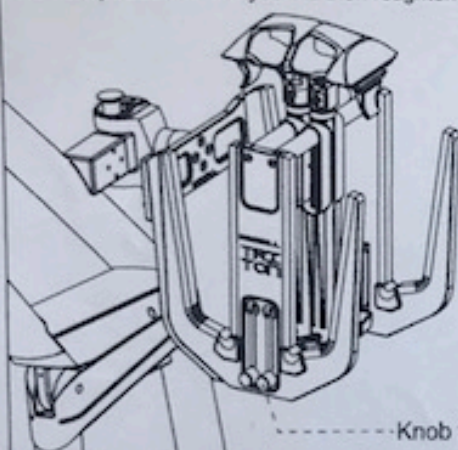

Knob to loosen/tighten

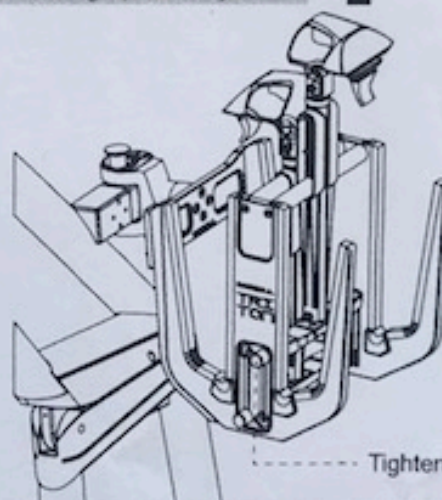

Tighten

## C


### Inserting Boards



1 : Slide your board into one of the Triton rack slots.




2 : Pull up on the telescopic arm and flip your board towards it.

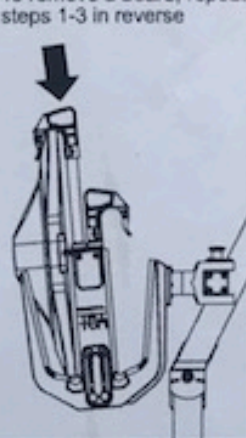

3 : Let the telescopic arm clamp down over your board. To remove a board, repeat steps 1-3 in reverse

Ensure wakeboards with sharper edges are located within the harder rubber wakeboard pads in the time slots. This is essential to avoid damaging the softer foam protection intended for fragile surfboards and wakesurfers.

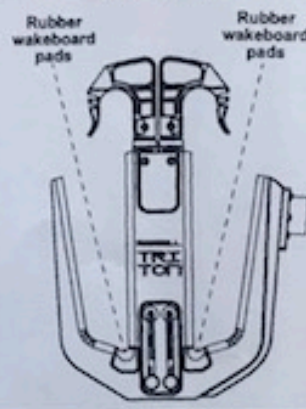

Rubber wakeboard pads

Rubber wakeboard pads