


NAUTIQUE


Deluxe Mirror Assembly Instructions

HARDWARE



x3

PARTS

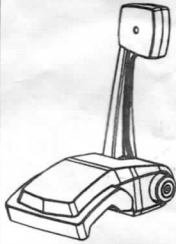


Exterior Clamp



Interior Clamp



Mirror Clamp Insert

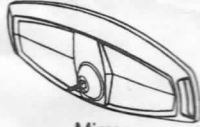

Mirror



Rubber Disc





Hand Knob

TOOLS REQUIRED




LOCTITE
THREADLOCKER
RED

3/16" Allen Key

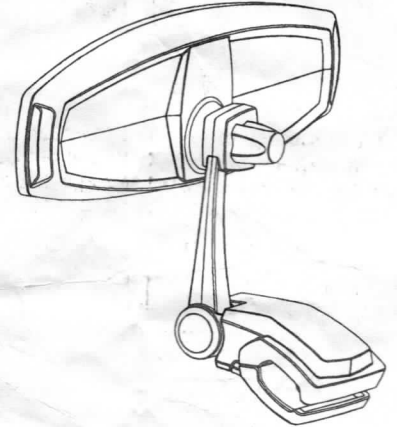


A

Place each half of the header insert set into the exterior clamp and interior clamp (exterior clamp shown upside-down).

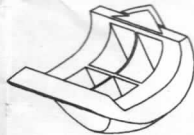


Exterior Clamp

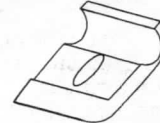

Interior Clamp


B

Locate the interior clamp and insert on the starboard windshield header, where you would like the mirror to be. Hold the interior clamp in place with one hand.

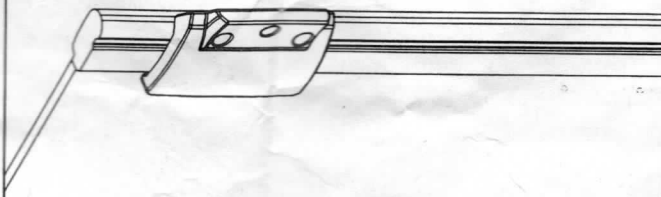

C

Locate the exterior clamp and insert it above the interior clamp. To ensure a good fit, anchor the bottom edge of the exterior clamp on the header rubber and pivot the exterior clamp towards you. Hold the two clamp sections in place with one hand.

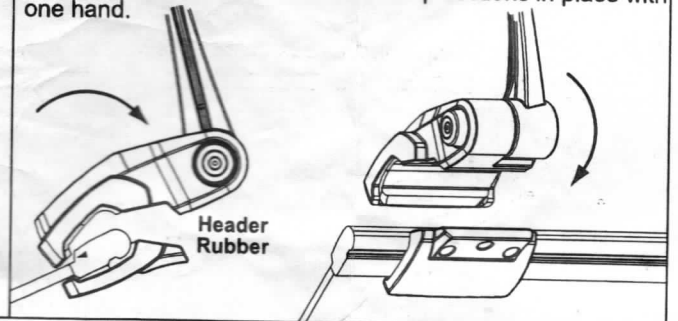


D

Using one of the bolts provided with your mirror arm thread into the center hole through the two clamps sections, just enough to hold them in place. Do not fully tighten yet.



x1

3/16"

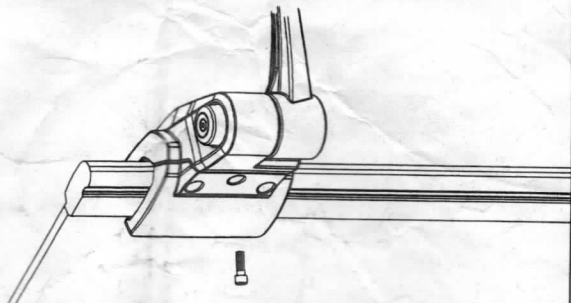

E

Apply RED Loctite to the other two bolts provided and thread the bolts in the remaining two holes. Remove the center bolt from step E, apply Loctite, and re-fasten. Do not fully tighten these three bolts yet.



x2



3/16"

